


SHAD

YAMAHA MT09 TRACER '15

Y0MT95iF

3P
SYSTEM

DESIGNED IN
BARCELONA

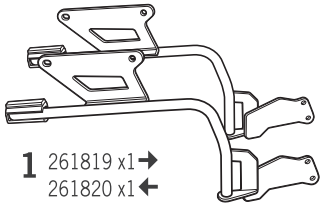

1 261819 x1 →
261820 x1 ←



2 303045 x4
Ø8



3 303017 x4
Ø6



4 304052 x4
M6 x 20 Din 7380



5 304039 x4
M8 x 40 Din 7380



6 261121 x4
Ø20 Ø11 x 18

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

