

CF10

Suzuki DR650SE


Mounting kit

Note	Description	Cat.No	Quan.
1	Bolt M8x110	844	1
2	Washer M8	802	4
3	Bolt M8x45mm	820	1
4	Bolt M8x25mm	831	2
5	Washer M8 (spring)	800	2
6	aluminium. cylinder d=13mm	130	1
7	dural. cylinder d=60mm	434	1
8	dural. cylinder d=21mm	1158	1
9	Washer M10	805	1
10	Stickers RDmoto		2
11	Adapter	X72	1


Mounting instruction:

During installation it is necessary to adjust the cutting off cooler holder..

Warning - the threads of the screws is recommended to use glue (blue color).

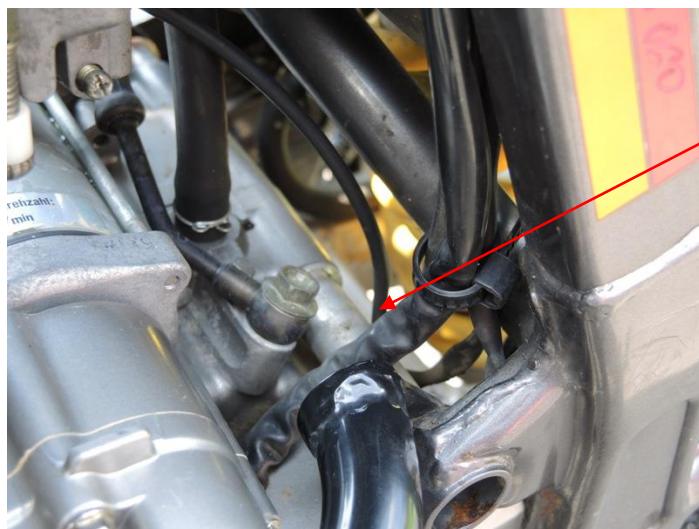

1. Dismantle original bolt from frame.
2. On the left side insert duralumin cylinder (note 7) and right side insert duralumin cylinder (note 8) and insert crash frames, this set fixed by original bolt.

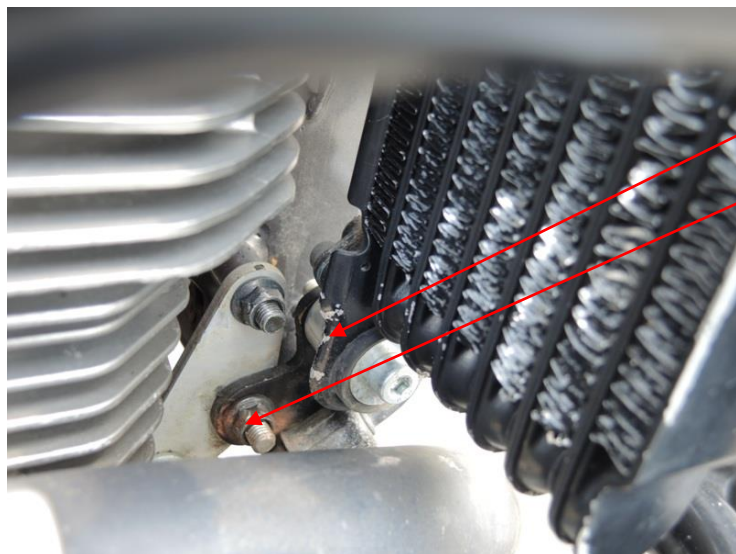

1. Remove bolt from coolant.
2. Insert aluminum cylinder (note 6). Used bolt (no. 3) and washer (no. 9 and 2).
3. Trought the frame insert bolt (no. 1) used washer (no. 2) and original nut.
4. It is important to cut holder.
5. Connect frames, used steel bar, bolts (no. 4) and washer (5 and 2).

