



RDMOTO CZECH REPUBLIC
info@rdmoto.cz
www.rdmoto.cz

CF190

Benelli TRK702

Kit for left side:

ID.	Description	Cat.No.	Pcs.
1	Crash protector	PVPKN-0/16	1
2	Al insert to the protector	X131	1
3	Dural.roller l=15mm	1218	1
4	Bolt M10x170x1,25mm	903	1
5	Sticker RDmoto		2
6	Dural.roller l=5mm	433	1
7	Bolt M8x30mm	834	2
8	Dural.roller l=5mm	478	1
9	Bolt M6x35mm	989	1
10	Washer M6	947	2
11	Nut M6-insurance	948	1

Kit for right side:


ID.	Description	Cat.No.	Pcs.
1	Crash protector	PVPKN-0/16	1
2	Al insert to the protector	X131	1
3	Dural.roller l=15mm	1218	1
4	Bolt M10x190x1,25mm	970	1
5	Dural.roller l=5mm	456	1
6	Dural.roller l=5mm	433	1
7	Bolt M8x30mm	834	2

The assembly process:

During assembly, we recommend using thread glue - medium strength (blue).

Left side :


Crash protector ID.1 + protector insert ID.2 + duralumin roller l=15mm ID.3 + bolt M10x170x1,25mm ID.4 + original nut M10 ID.5

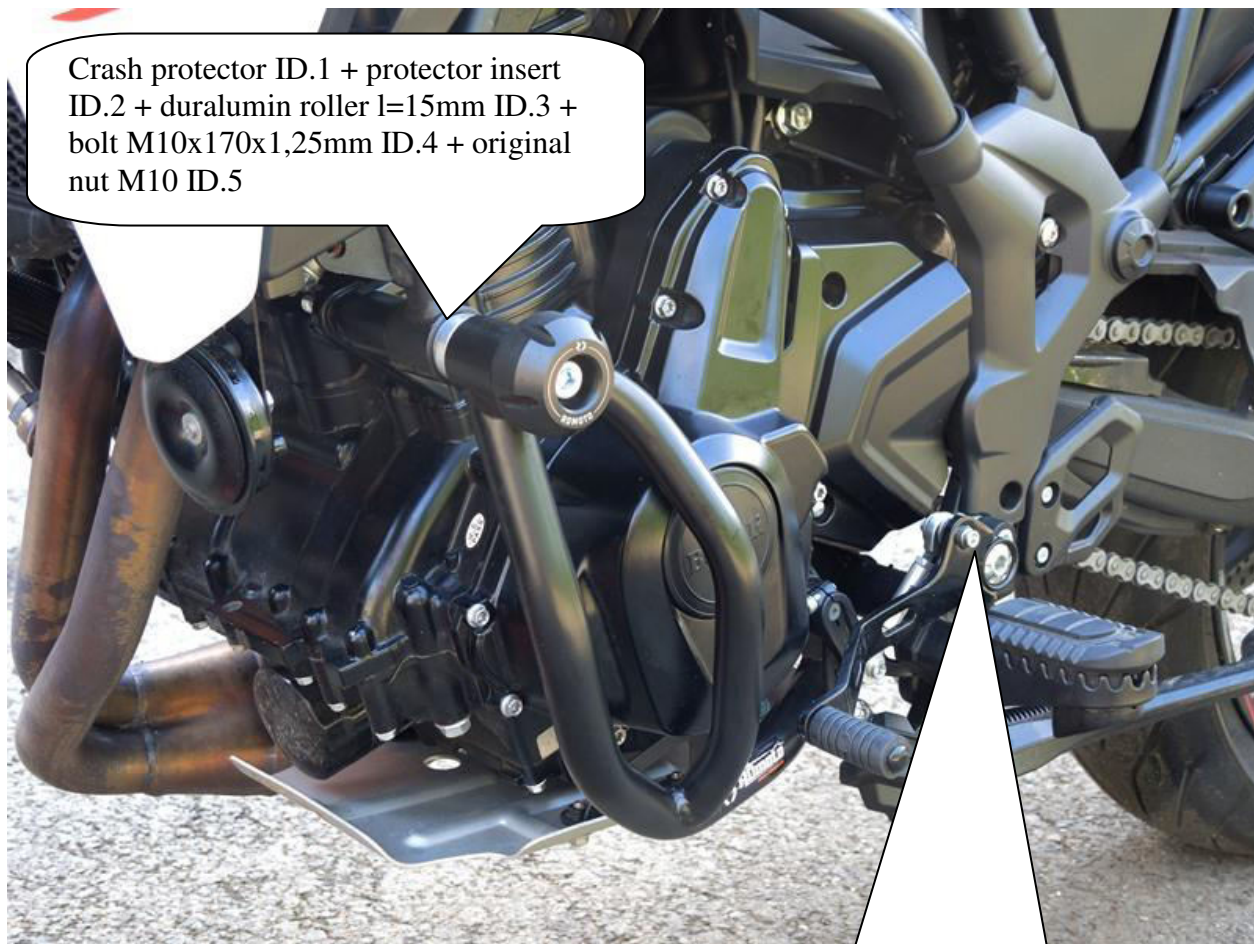

Loosen the original footrest holder, insert a duralumin roller l=5mm, diameter 19.8mm ID.6 under the upper attachment, insert the crash frame under the lower attachment and tighten the M8x30mm ID.7 bolts at both points.

Dismantle the bolt that holds the shift lever rod and use a duralumin roller l=5mm, diameter 16mm ID.8 to center it. Put M6 ID.10 washers on both sides of the roller and tighten with M6x35mm ID 9 bolt and M6 ID.11 nut.

Right side :

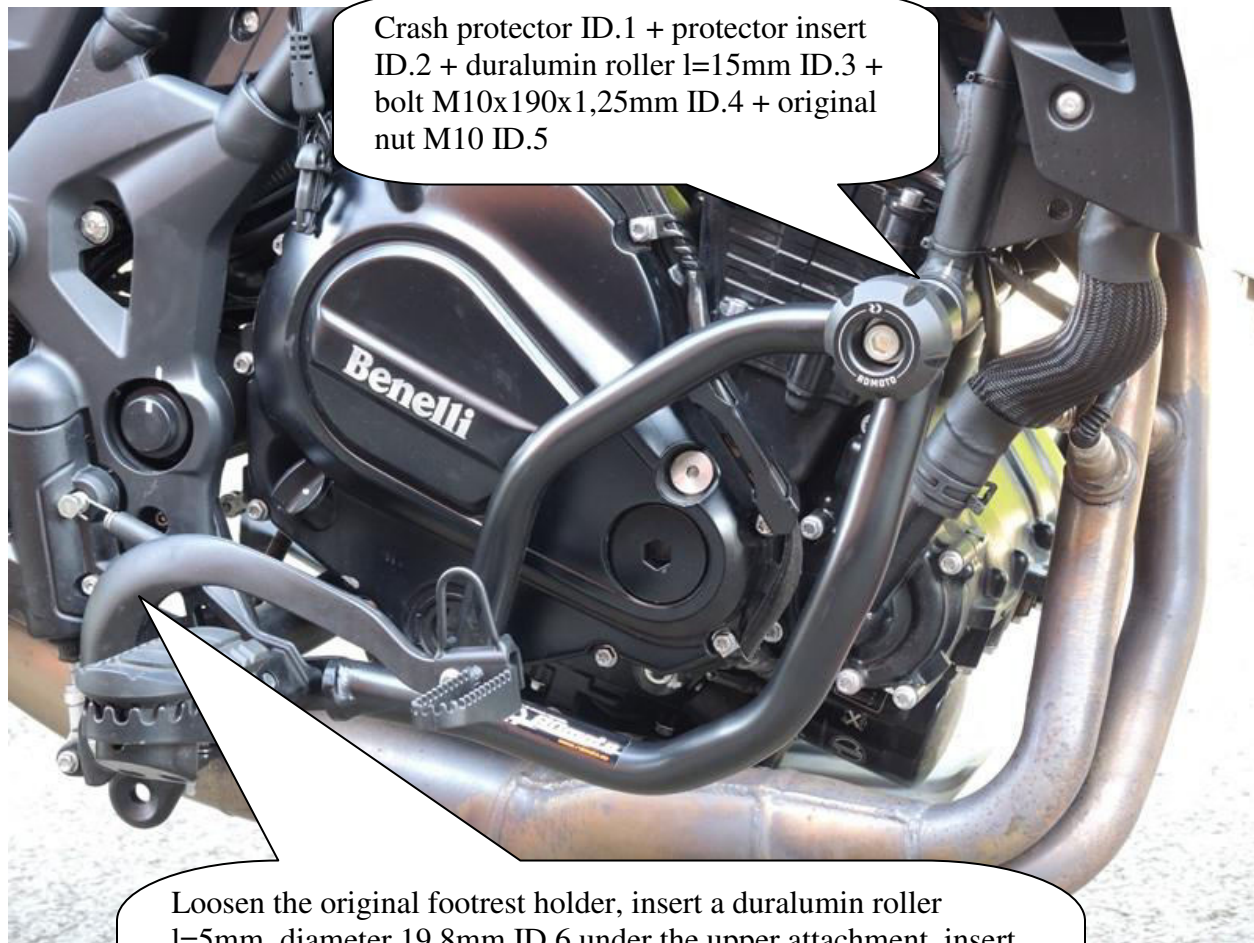

Crash protector ID.1 + protector insert ID.2 + duralumin roller l=15mm ID.3 + bolt M10x190x1,25mm ID.4 + original nut M10 ID.5

Loosen the original footrest holder, insert a duralumin roller l=5mm, diameter 19.8mm ID.6 under the upper attachment, insert the crash frame under the lower attachment and tighten the M8x30mm ID.7 bolts at both points.

Disassemble the bolt that holds the brake and insert the roller l=5mm, diameter 24.8mm ID.5 under the brake, remove the original bolt.