

CF38

BMW R1200GS / Adventure 2004-2007

Fitting kit:

No	Description	Cat.N	Qt
1	Crash frames	CF38	-
3	Washer M6	947	2
5	Bolt M6x25mm	874	1
6	Bolt M6x20mm	875	1
8	Bolt M6x30mm-cone head	864	1
9	Bolt M8x25 – round head	831	4
10	Bolt M8x40mm-cone head	835	1
11	Washer M8	802	4
12	Nut M8	809	2
13	Washer M8 spring	800	2
14	Bolt M12x90mm	808	2
15	Washer M12	803	2
16	Tape 3M		4
18	Alu. spacer diam. 20mm,length. 19mm	477	1
19	Alu. spacer-diam. 16mm,length. 5mm	478	1
20	Alu. spacer-diam. 20mm,length. 13mm	479	1
21	Alu. spacer-diam. 25mm,length. 28mm	480	2
22	Steel conect.bar 230mm	X61	1
23	Steel adapter	X68	1
24	Advert. stickers RDmoto		2

Assembly:

Make assembly as shown on the pictures.


Warning - on the threads of the screws we recommend using premium adhesive moderate (blue).

1x bolt M6x20mm (No.6)
1x podložka M6 (No.3)


1x steel conect. bar (No.22)
2x Bolt M8x25mm (No.9)
2x Washer M8 spring (No.13)

1x steel adapter (No.23)
1x bolt M8x25mm (No.9)
2x washer M8 (No.11)
1x nut M8 (No.12)
1x bolt M6x30mm (No.8)
1x alu.spacer (No.20)

1x bolt M6x25 (No.5)
2x washer M6 (No.3)
1x dural. spacer(No.19)

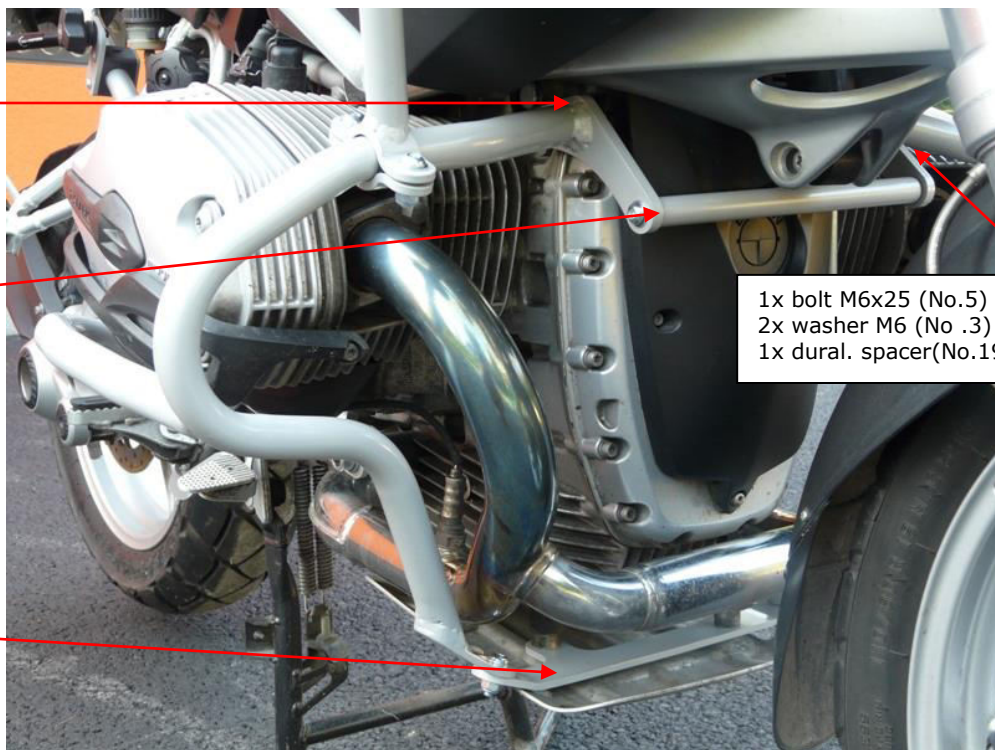



2x bolt M12x90mm (No. 14, left and right)
2x alu.spacer (No.21, left and right)
2x washer M12 (No.15, left and right)

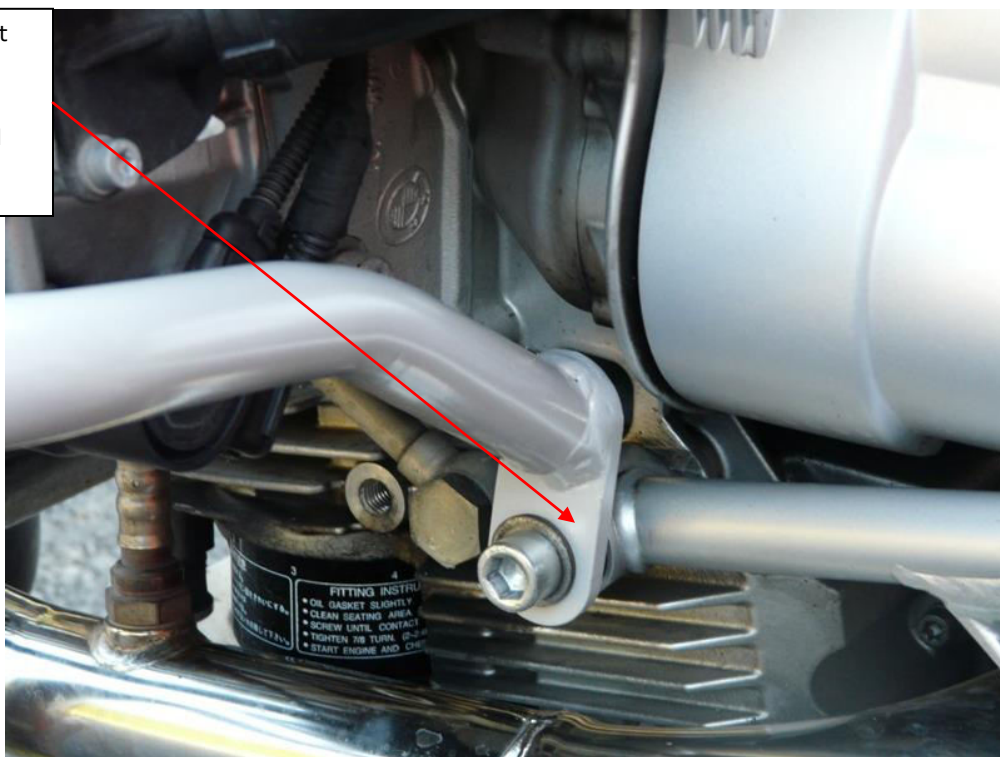


1x bolt M8x25mm (No.9)
2x washer M8 (No.11)
1x Nut M8 (No.12)
1x dural. spacer (No.18)
1x Bolt M8x40mm (No.10)



1x bolt M6x25mm (No.5)
1x washer M6 (No.3)
1x dural. spacer (No.19)

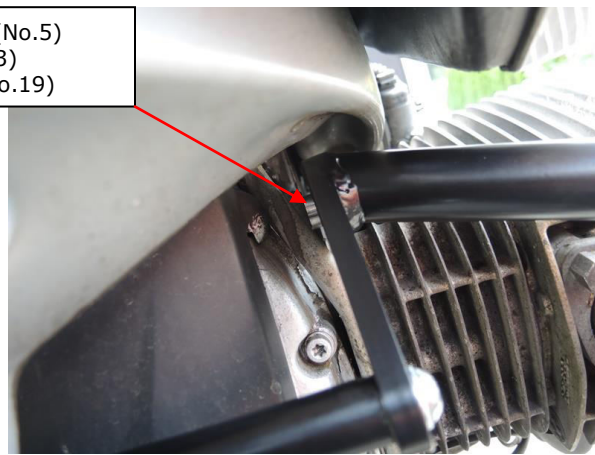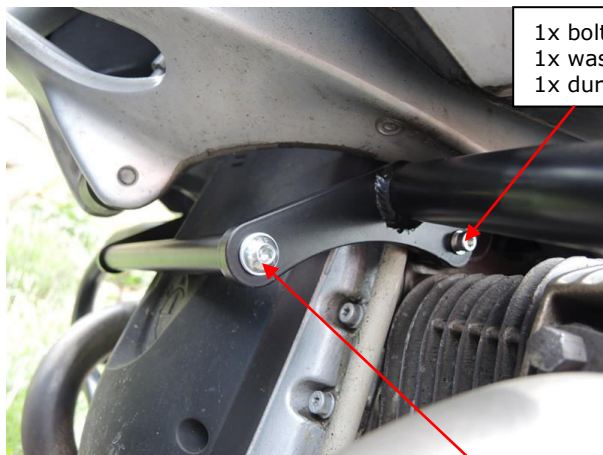

1x Bolt M8x25mm (No.9)
1x washer M8 spring (No.13)

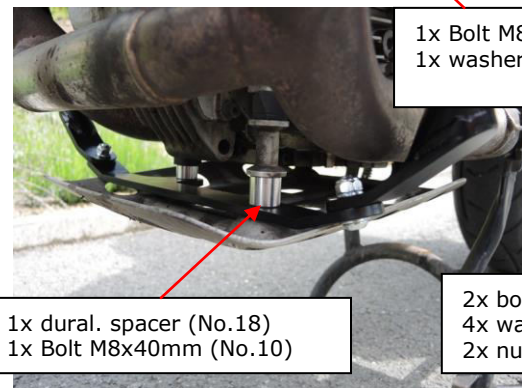

1x dural. spacer (No.18)
1x Bolt M8x40mm (No.10)

2x bolt M8x25mm (No.9)
4x washer M8 (No.11)
2x nut M8 (No.12)

