

CF144-PH01

Honda CB650R Neo Sport


Kit for Left Side			
ID	Description	Cat.No	Pcs
1	Protector	PVPMN-0/16	1
2	Dural. insert for protector	X122	1
3	Bolt M12x120x1,25mm	913	1
4	Nut M12	1073	1
5	Dural. sleeve length= 22mm	1350	1
6	Threaded rod M12x295mm	12x295xZT	1
7	Lock nut M12	811	1
8	Washer M12	803	2
9	RDmoto sticker		1

Kit for Right Side			
ID	Description	Cat.No	Pcs
1	Protector	PVPMN-0/16	1
2	Dural. insert for protector	X122	1
3	Bolt M12x95x1,25mm	900	1
4	Nut M12	1073	1
5	Dural. sleeve length= 62mm	1351	1
6	Lock nut M12	811	1
7	Washer M12	803	2
8	RDmoto sticker		1

We recommend using medium strength thread glue during assembly.

Mounting instructions

1. Remove the original lower screw on the engine, marked in the photo.
2. Remove the shift lever on the left side.
3. Take an M12x295mm steel rod with a sealed nut from the mounting kit, slide an M12 washer under the nut and push it from the left side of the motorcycle to the right side. You will have a sealed nut on the left side of the motorcycle.
4. Now take the classic M12 nut with M12 washer and screw it to the motor on the right side and tighten. The lower part of the motorcycle is ready for the assembly of crash frames.
5. Remove the original upper bolt on the right side of the motorcycle and take the right crash frame. At the top, lightly tighten the crash frame with the M12x95x1.25mm bolt, which you insert through the duralumin insert and protector.
6. At the bottom, thread a 62mm long duralumin sleeve onto a steel rod. Fit the crash frame and tighten the frame slightly with an M12 lock nut with a flat washer. You can now tighten the upper bolt and lower nut (torque 40Nm). The drop frame on the right side is mounted..
7. Install the left drop frame in a similar way, tighten the M12x120x1.25mm bolt in the upper part of the motorcycle (including the duralumin insert and protector as on the right side) and use the 22mm long duralumin sleeve under the frame in the lower part, tighten the M12 lock nut with M12 flat washer.
8. Thank you for purchasing our product. If you have any problems with the installation, please contact us: info@rdmoto.eu

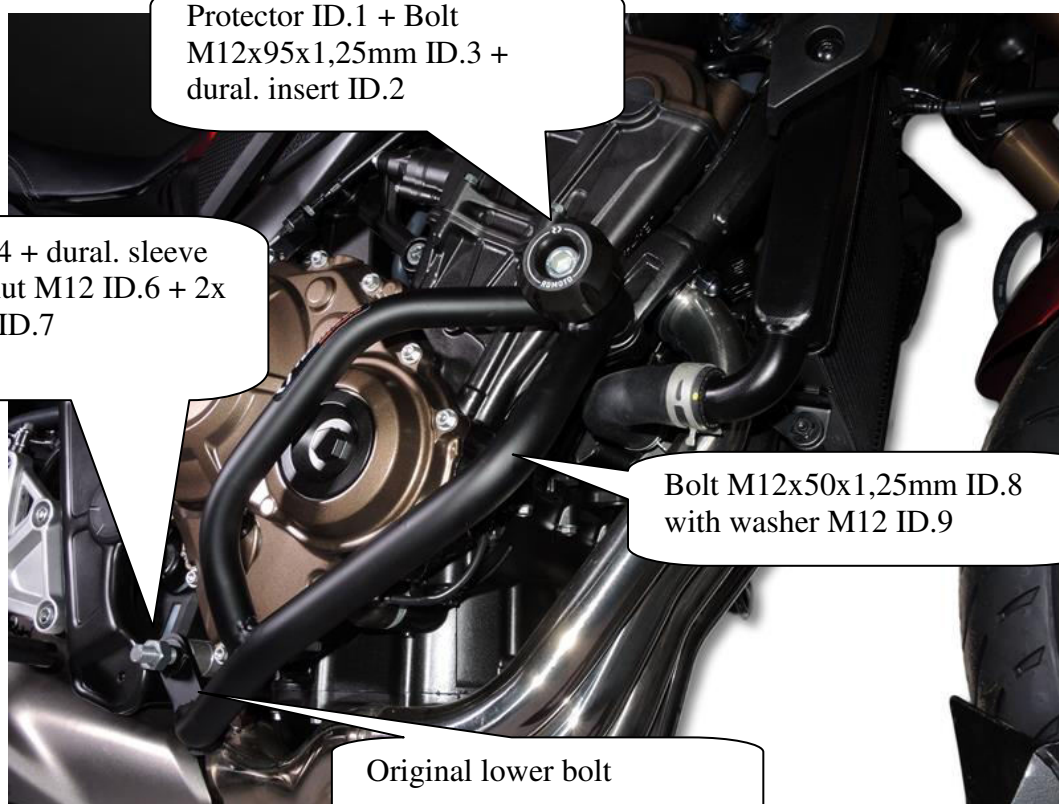

Protector ID.1 + bolt
M12x120x1,25mm ID.3 +
dural. insert ID.2

Steel rod M12x295mm ID.6 +
nut M12 ID.4 + duralo. sleeve
ID.5 + lock nut M12 ID.7 + 2x
washer M12 ID.8

