

Y16


Yamaha R1 2007-2008

Fitting kit left side:

ID	Description	Cat.N	QTY
1	Steel box M10	X1	1
2	Bolt M10x70x1,25mm	898	1
3	Dural. cylinder d=7mm	137	1
4	Dural. cylinder d=55mm	20	1
5	Bolt M10x90mm	880	1
6	Washer M10 (spring)	801	2
7	Steel adapter	597	1
8	Tape 3M		1

Fitting kit right side:

ID	Description	Cat.N	QTY
1	Steel box M10	X1	1
2	Bolt M10x60x1,25mm	896	1
3	Dural. cylinder d=5mm	16	1
4	Dural.cylinder d=55mm	20	1
5	Bolt M10x90mm	880	1
6	Washer M10 (spring)	801	2
7	Steel adapter	598	1
8	Tape 3M		1

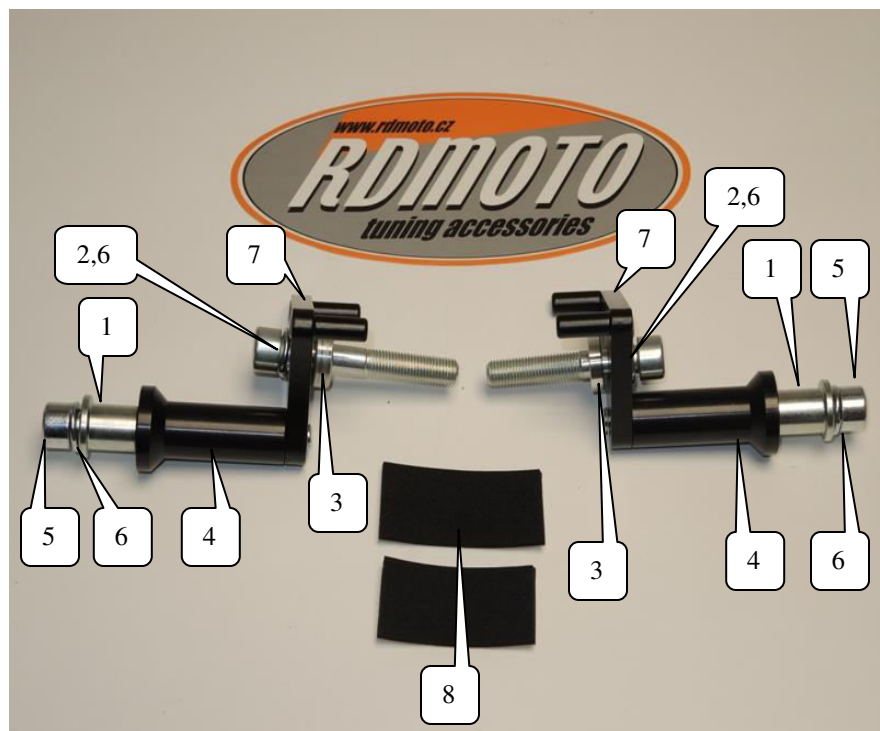



Instruction to assembly, left side:

1. Take off fairing and orig. bolt M10 from frame.
2. Stick 3M ID.8 on the frame, under the adapter ID.7.
3. Under the adapter ID.7 insert dural.cylinder ID.3 and use bolt ID.2 and washer ID.6 tighten adapter on frame.
4. Check all kit and after put fairing on the bike.
5. Put steel box ID.1 with bolt. ID.5 and washer ID.6 into the protector. Under the protector put dural.cylinder ID.4.
6. This set mount on the steel adapter ID.7.

Instruction to assembly, right side:

1. Take off fairing and orig. bolt M10 from frame.
2. Stick 3M ID.8 on the frame, under the adapter ID.7.
3. Under the adapter ID.7 insert dural.cylinder ID.3 and use bolt ID.2 and washer ID.6 tighten adapter on frame.
4. Check all kit and after put fairing on the bike.
5. Put steel box ID.1 with bolt. ID.5 and washer ID.6 into the protector. Under the protector put dural.cylinder ID.4.
6. This set mount on the steel adapter ID.7.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).