



RDMOTO CZECH REPUBLIC
info@rdmoto.cz
www.rdmoto.cz

CF193

Honda NT1100

Kit for left side:

ID.	Description	Cat.No.	Pcs.
1	Steel adapter -front	X178	1
2	Dural.roller l=10mm	DV-124	1
3	Bolt M8x30mm	834	2
4	Bolt M8x35mm	861	1
5	Washer M8-flat	802	8
6	Bolt M8x25mm	831	2
7	Nut M8-insurance	809	3
8	Bolt M8x100mm	1000	1
9	Sticker RDmoto		1


Kit for right side:

ID.	Description	Cat.No.	Pcs.
1	Steel adapter	X179	1
2	Bolt M8x20mm	823	2
3	Washer M8-flat	802	6
4	Dural. stirrup	X80	2
5	Bolt M8x60mm	838	2
6	Bolt M8x50mm	837	1
7	Nut M8-insurance	809	1
8	3M tape		2
9	Sticker RDmoto		1

The assembly process:


During assembly, we recommend using thread glue - medium strength (blue).

Left side :

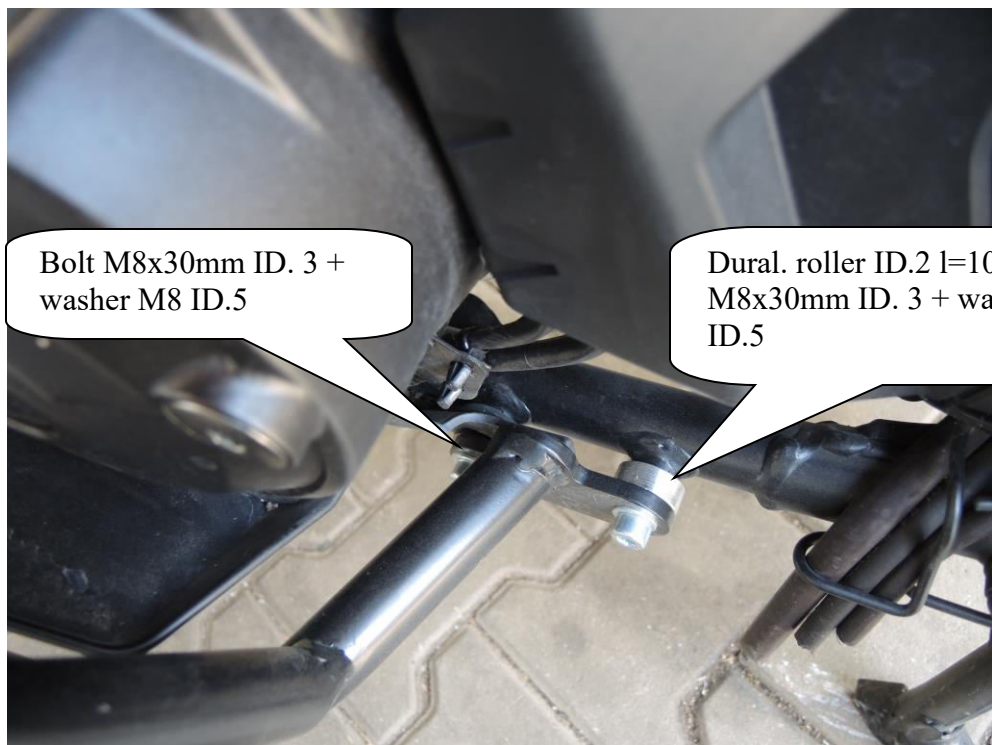

Bolt M8x30mm ID. 3 +
washer M8 ID.5

Dural. roller ID.2 l=10mm + bolt
M8x30mm ID. 3 + washer M8
ID.5

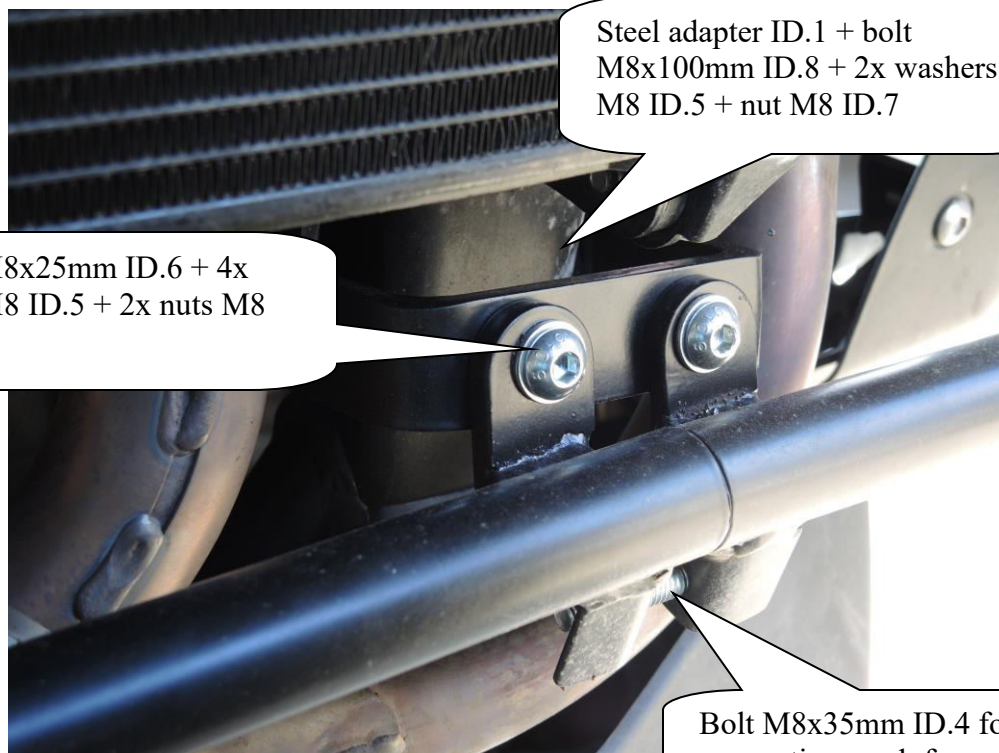

2x bolts M8x25mm ID.6 + 4x
washers M8 ID.5 + 2x nuts M8
ID.7

Steel adapter ID.1 + bolt
M8x100mm ID.8 + 2x washers
M8 ID.5 + nut M8 ID.7

Bolt M8x35mm ID.4 for
connecting crash frames

Right side :

