

CF47

BMW R 1200GS Adventure 2014-


Mounting kit for the left side:

ID	Description	Cat.no	Pcs
1	Bolt M8x35	861	1
2	Dural.cylinder - 15mm	465	1
3	Bolt M10x45	848	1
4	Washer M10	804	1
5	Washer M8	802	2
6	Bolt M8x25	833	1
7	Nut M8	812	1

Mounting kit for the right side:

ID	Description	Cat.no	Pcs
1	Bolt M8x35	861	1
2	Dural.cylinder - 15mm	465	1
3	Bolt M10x45	848	1
4	Washer M10	804	1
5	Bolt M8x30	834	1
6	Dural.cylinder d=8mm	1105	1
7	Nut M8	812	1
8	Washer M8	802	2


Install crash bars according to the pictures below.

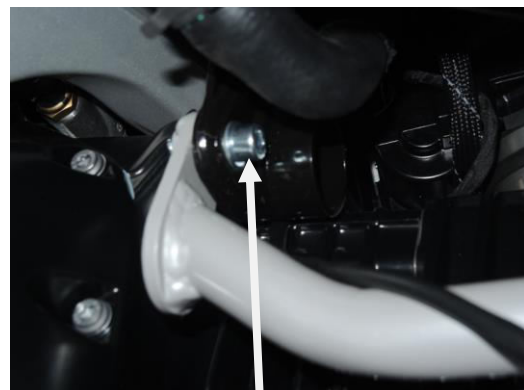

Bolt M8x25 ID6 + washer
ID5 + ID.7

For tightening lower crash frame use bolt ID3 and washer ID4.

For tightening upper crash frame use bolt ID1 and dural. Cylinder ID2 + washer M8 ID.5

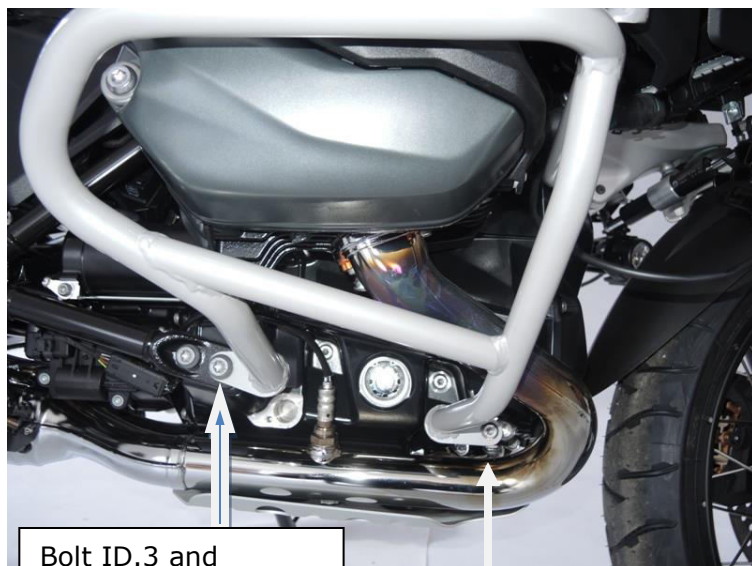

Bolt ID.3 and
washer ID.4.

Dural cylinder
ID.2.

Bolt ID.1+
washer ID.8



Dural cylinder ID.6.

Nut ID.7 and bolt M8x30
ID.5 + washer ID.8

We recommend to use the glue on all threads (blue colour – medium strong).