


CF35


Yamaha TDM900

ID	Description	Cat.n	QTY
1	Silent-block	X34	2
2	Nut M8	813	2
3	Thread bar 10x350x30x30		1
4	Dural.cylinder l=22mm	1158	1
5	Dural.cylinder l=41mm	1157	1
6	Nut M10	961	2
7	Washer spring M10	801	2
8	Larg-washer M12	803	2
9	3M tape		2
10	RDmoto stickers	-	2
11	Bolt M12x75x1,25	914	2

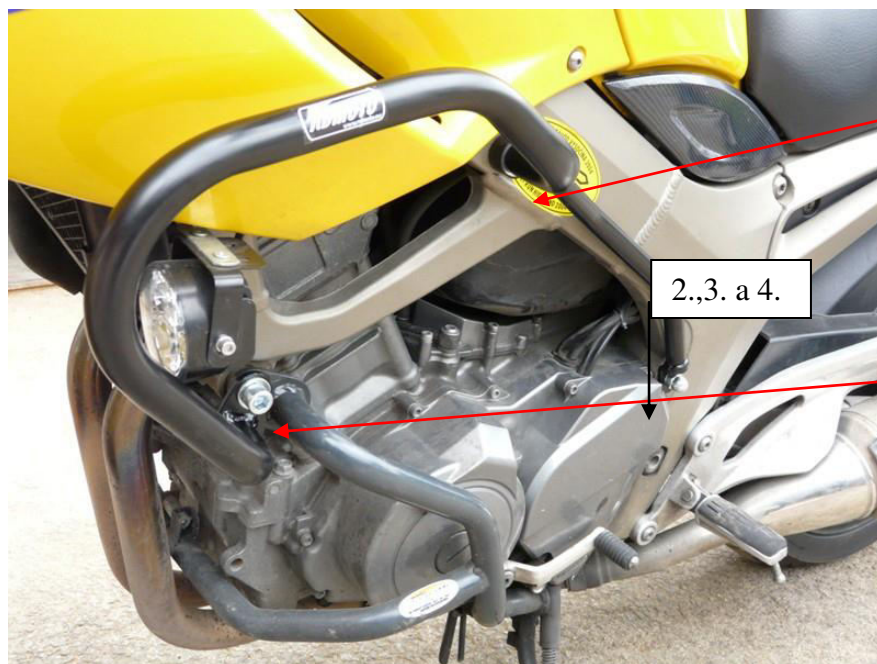

1. Silent-block + Nut M8.
2. Thread bar, through the frame M10x350mm.
3. Into the frame insert dural.cylinder.
4. Nut M10 + spring washer M10.
5. Bolt M12 +large washer
6. 3M tape

**Use the glue of all threads-
medium strong.**

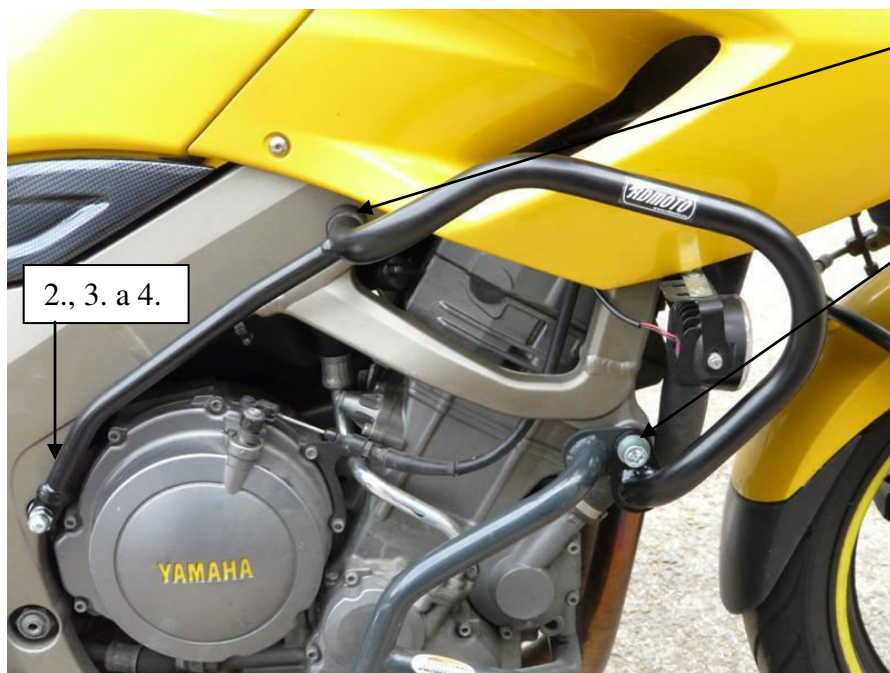

1. Silent block+nut M80.
2. Insert into the frame dural.cylinder.
3. Nut M10 + pwasher spring M10
4. Bolt M12 + washer
5. 3M tape.

Use the glue of all threads-medium strong.