

CF49

Yamaha XTZ 1200 Tenere

Left side fitting kit:

ID.	Descrip.	Cat.N	Qt
1	Crash bar	-	1
2	Bolt M8x20	823	1
3	Washer M8	802	2
4	Washer spring M8	800	2
5	Bolt M8x40	828	1
6	Alu spacer d=19mm	477	1
7	RDmoto sticker	-	1
8	Plastic cover	X5	1


Right side fitting kit:

ID.	Descrip.	Cat.N	Qt
1	Crash bar	-	1
2	Bolt M8x20	823	2
3	Washer M8	802	2
4	Washer spring M8	800	2
5	RDmoto logo sticker	-	1
6	Plastic cover	X5	1
7	Alu spacer d=22mm	1336	1
	- on some models		

Assembly instruction:

Make the assembly according to the attached photos


Warning- use the Loctite glue of threads, during a mounting. Medium strong.

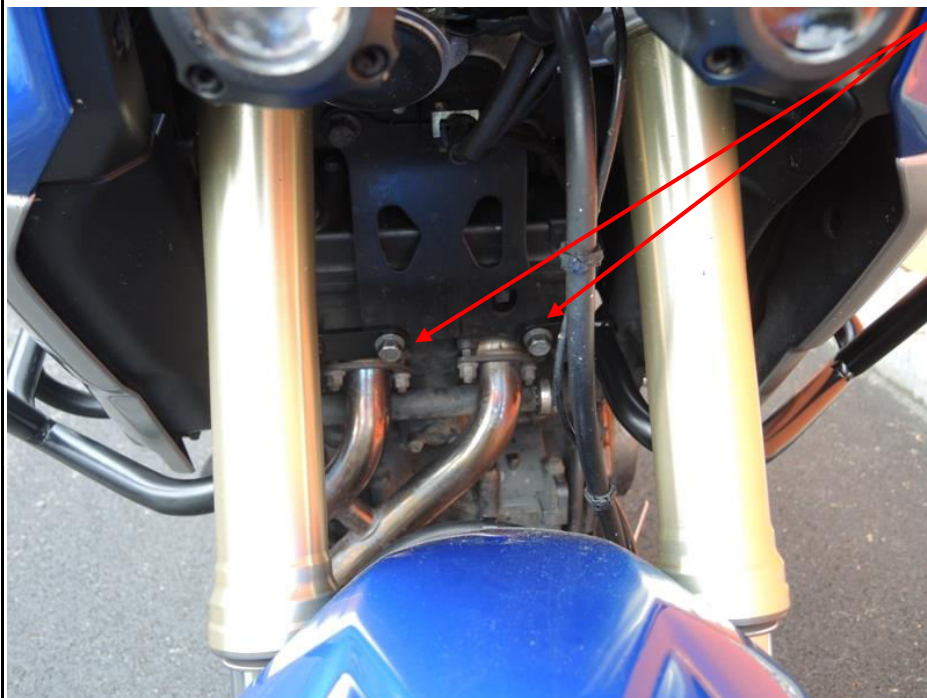

For front gripping use original bolts.



Insert washer ID.3 and ID.4 on the bolts ID.2 M8x20. Tighten these bolts. Place plastic covers.

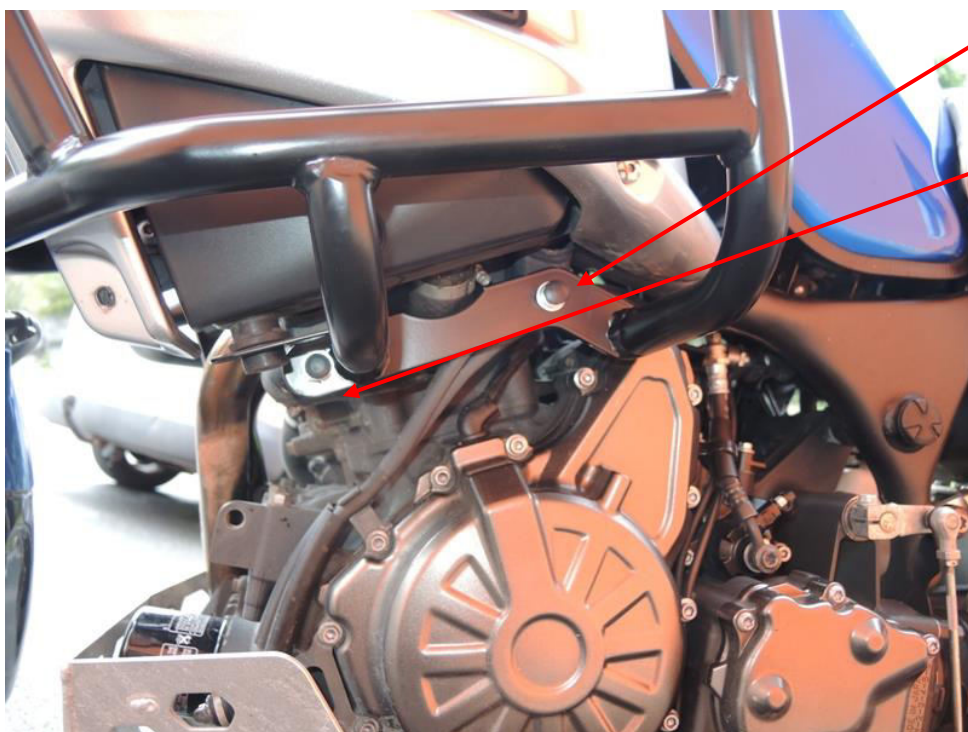

Insert washer ID.3 and ID.4 on the bolts ID.2 M8x20. Insert washer ID.3 and ID.4 on the bolts ID.5 M8x40. Between the frames and crash bar insert spacer ID.6. Place plastic covers.