



RDMOTO CZECH REPUBLIC
info@rdmoto.cz
www.rdmoto.cz

CF32

Yamaha TDM850

Kit for the left side

No.	Description	Cat.no.	Pcs
1	Crash bar		1
2	Bolt M8x25mm	833	1
3	Bolt M8x40mm	828	1
4	Pad M8-spring	800	1
5	Bolt M10x50x1,25mm	921	1
6	Pad M10-spring	801	1
7	Dural. cylinder d=10mm	437	1
8	Dural. cylinder d=16,5mm	106	1
9	Nut M10 – safety	810	1
10	Pad M10 – plane	804	1
11	Steel bar 10x320x30x30		1
12	Advertising sticker RDmoto		1

Kit for the right side

No.	Description	Cat.no.	Pcs
1	Crash bar		1
3	Bolt M8x40mm	828	1
4	Bolt M8-spring	800	1
5	Bolt M10x90x1,25mm	890	1
6	Pad M10-spring	801	1
7	Dural. cylinder d=10mm	437	1
8	Dural. cylinder d=16,5mm	106	1
9	Nut M10 – safety	810	1
10	Pad M10 – plane	804	1
11	Advertising sticker RDmoto		1

Installation:

Make the installation of the crash bar according to the instruction on the below attached photos.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

The right side:




bolt M10x90x1,25mm +
duralumin cylinder d=16,5mm +
pad M10 (spring)

nut M10 (safety) + pad
M10

bolt M8x40mm + duralumin cylinder
d=10mm + pad M8 (spring)

The left side:

bolt M8x40mm + duralumin cylinder
d=10mm + pad M8 (spring)

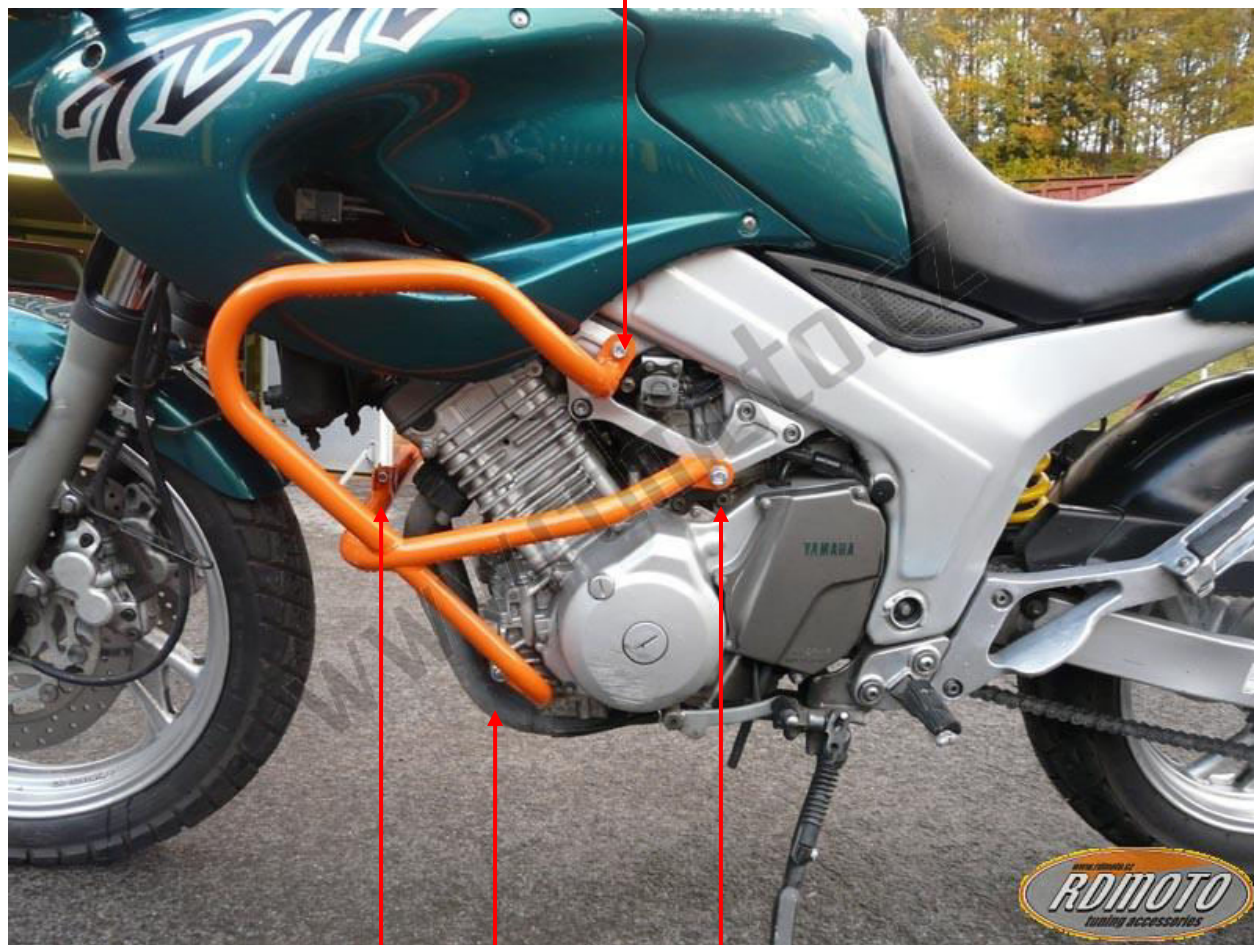

bolt M8x25mm to
connect the left and
right crash bar

steel bar
d=320mm +
nut M10
(safety) +
pad M10

bolt M10x50x1,25mm + duralumin
cylinder d=16,5mm + pad M10
(spring)