

CF84

KTM 990 Adventure

Kit for right side

Poz.	Popis	Kat.číslo	Počet
1	Crash frame		1
2	Clamp	X78	1
3	Nut M8	951	2
4	Washer M8 – flat	802	4
5	Bolt M8x70mm	841	1
6	Bolt M8x40mm	828	1
7	Dural. cylinder d=12mm	130	1
8	Tube plug 25mm	X19	1
9	Tape 3M		2
10	Sticker RDmoto		1
11	Washer M8 – spring	800	2
12	Bolt M10 x 200	889	1
13	Washer M10 flat	804	1
14	Dural. cylinder d=21mm	DV1158	1

Kit for left side


Poz.	Popis	Kat.číslo	Počet
1	Crash frame		1
2	Clamp	X78	1
3	Nut M8	951	2
4	Washer M8 – flat	802	4
5	Bolt M8x70mm	841	1
6	Bolt M8x40mm	828	1
7	Dural. cylinder d=12mm	130	1
8	Tube plug 25mm	X19	1
9	Tape 3M		2
10	Sticker RDmoto		1
11	Washer M8 – spring	800	2
12			
13			

Mounting instructions:

Install the crash frames as instructed on the attached photos.


Installation of the frames for both sides is the same.

Attention: We recommend using blue color medium strenght glue for threads of all bolts.

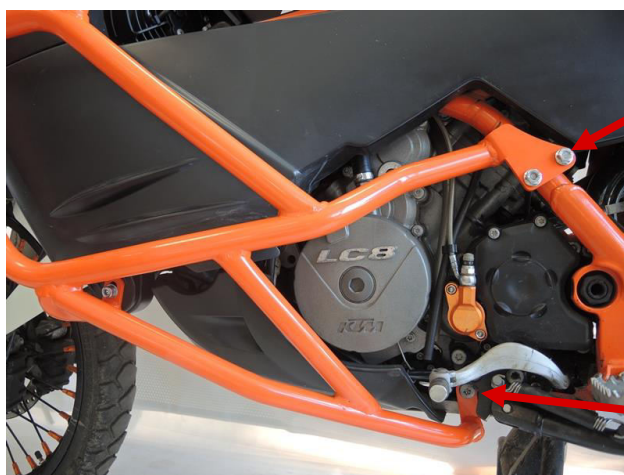

Clamp +2x Tape 3M + 2x
Washer M8 ID.4 + 2x
Washer M8 spring ID. 11
+ 2x nut M8 ID.3

Original bolt

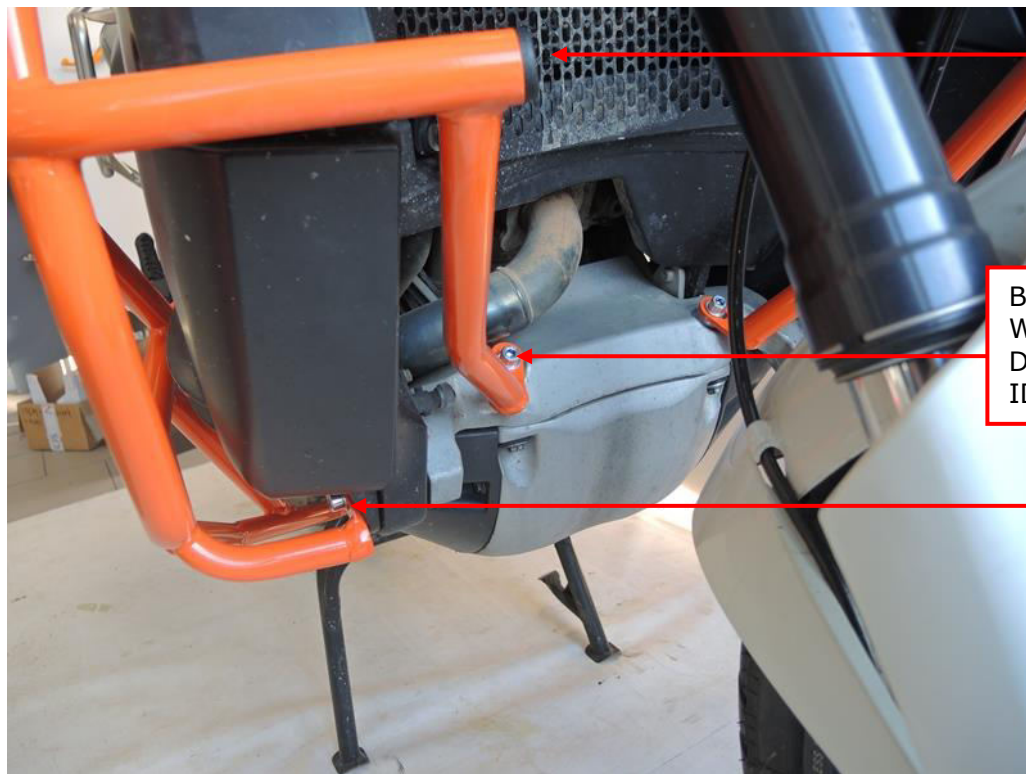

Tube plug

Bolt M8x40mm ID.6 +
Washer M8 (flat) ID.4 +
Dural. cylinder d=12mm
ID.7

Bolt M8x70mm ID.5
+ Washer M8 (flat
)ID.4



Bolt M10x200mm
ID.12 + Washer M10
(flat) ID.13, Dural.
cylinder ID.14. From
the other side of the
motorcycle, use self-
locking nut.