

CF89KD

Honda CB 500 X 2021-

Kit for the left side			
ID	Description	Cat.No.	PC
1	Bolt M10x80x1,25	920	1
2	Insert under bolt M10	X115	1
3	Plastic cover for bolt M10	X4	1
4	Bolt M10x55x1,25	915	1
5	Cover to the tube	X19	1
6	Sticker RDmoto		1


Kit for the right side			
ID	Description	Cat.No.	PC
1	Bolt M10x70x1,25	898	1
2	Insert under bolt M10	X115	1
3	Plastic cover for bolt M10	X4	1
4	Bolt M10x55x1,25	915	1
5	Cover to the tube	X19	1
6	Sticker RDmoto		1

We recommend using a medium-strength thread glue.

Instruction :

- 1.) First, dismantle the original M10 screws on the right side and mount the crash frame, see photo.
- 2.) Proceed in the same way when assembling the left side. The only difference between the right and left side is the length of the rear screw.

Bolt M10x70x1,25mm ID.1 (for the left side use M10x80x1,25mm) + insert M10 ID.2 + cover M10 ID.3

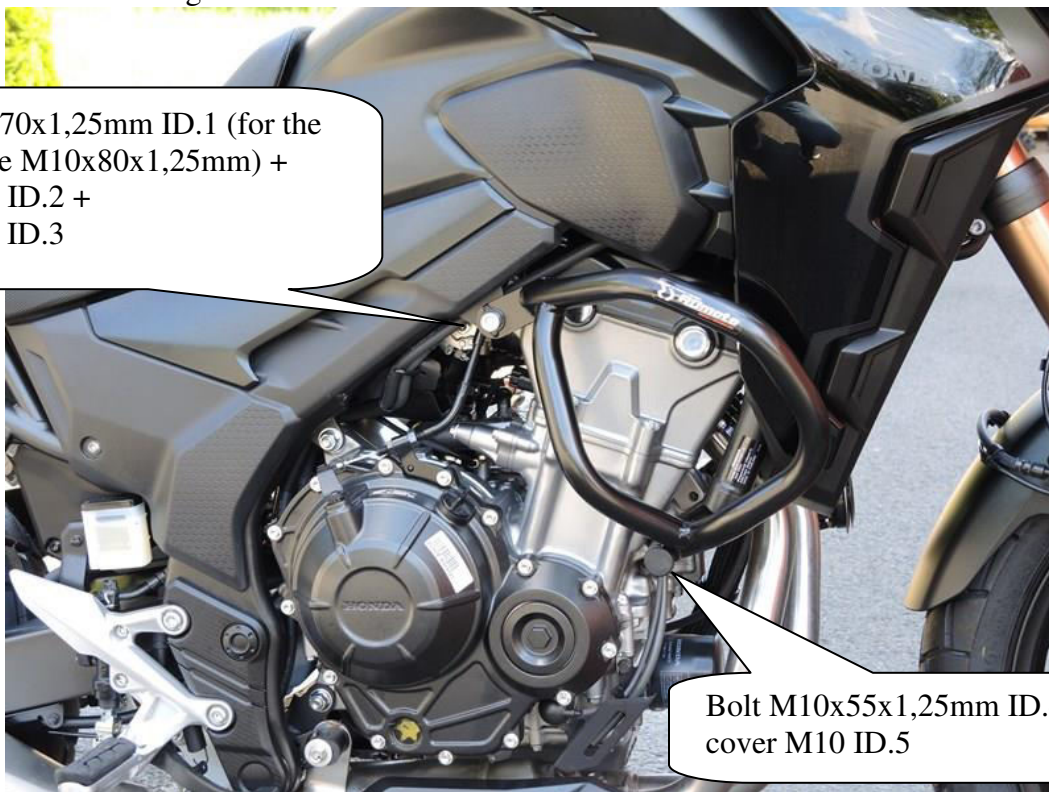

Bolt M10x55x1,25mm ID.4 + cover M10 ID.5