

CF76

Yamaha FZ6 2004-2012

Mounting kit for right side:

ID	Description	Cat. No.	Pcs
1	Crash frame	CF76	1
2	Bolt M10x60x1,25	896	1
3	Dural. roller d=14,5mm	1160	1
4	Washer M10 flat	804	2
5	Bolt M8x30	834	1


Mounting kit for left side:

ID	Description	Cat. No.	Pcs
1	Crash frame	CF76	1
2	Bolt M10x60x1,25	896	1
3	Dural. roller d=14,5mm	1160	1
4	Washer M10 flat	804	2
5	3M tape		2

Mounting instructions: Use the same procedure for both sides!

We recommend using medium strenght thread glue during assembly.

Remove the original bolt and replace it with M10x60 ID.2 + Washer M10 ID.4. Replace the original. Insert the ID.3 roller between crash frame and frame of the motorcycle.

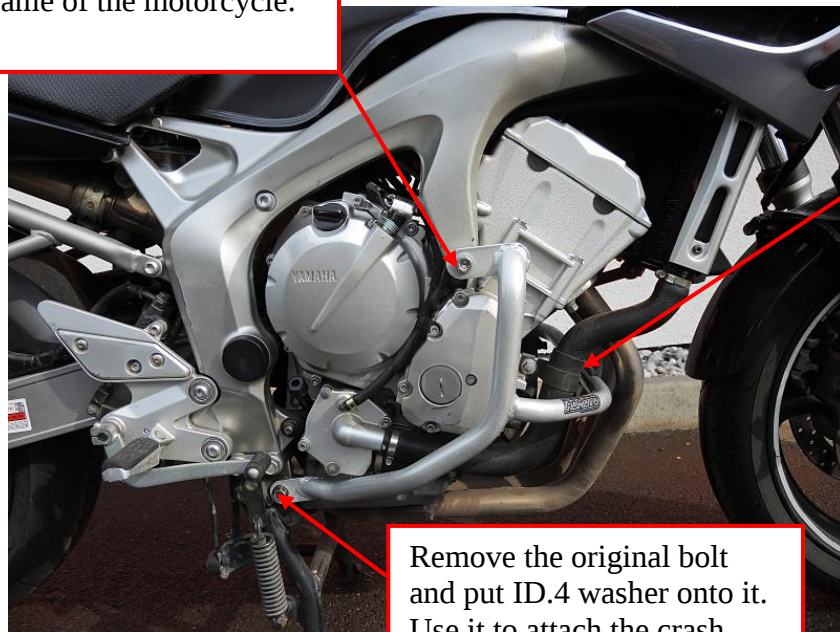

Remove the original bolt and put ID.4 washer onto it. Use it to attach the crash frame as shown on picture. Then, push the bolt through motorcycle frame and tighten.

Use the bolt M8x30 ID.5.

