

CF98

BMW R1150 R 2001-2006

Kit for right side

Poz.	Popis	Kat.číslo	Počet
1	Crash frame		1
2	Dural. roller d=61mm	DV1223	1
3	Silentblok	X21	1
4	Nut M10 hat	961	1
5	Washer M10 – flat	804	3
6	Bolt M10x100	885	1
7	Nut M8 self-locking	809	1
8	Washer M8 flat	802	1
9	Bolt M10x60	850	1
10	Rod 10x230x30x30		1
11	Dural. roller d=15mm	DV1170	1
12	Dural. roller d=38mm	DV1255	1
13	Sticker RDmoto		1

Kit for left side


Poz.	Popis	Kat.číslo	Počet
1	Crash frame		1
2	Dural. roller d=61mm	DV1223	1
3	Silentblok	X21	1
4	Nut M10 hat	961	1
5	Washer M10 – flat	804	3
6	Bolt M10x100	885	1
7	Nut M8 self-locking	809	1
8	Washer M8 flat	802	1
9	Bolt M10x60	849	1
11	Dural. roller d=15mm	DV1170	1
12	Dural. roller d=88mm	DV1256	1
13	Sticker RDmoto		1

Mounting instructions:

Proceed with mounting as shown on the pictures attached.

Attention – for threads of all bolts, we recommend using medium strenght thread glue (blue color).

Right side:

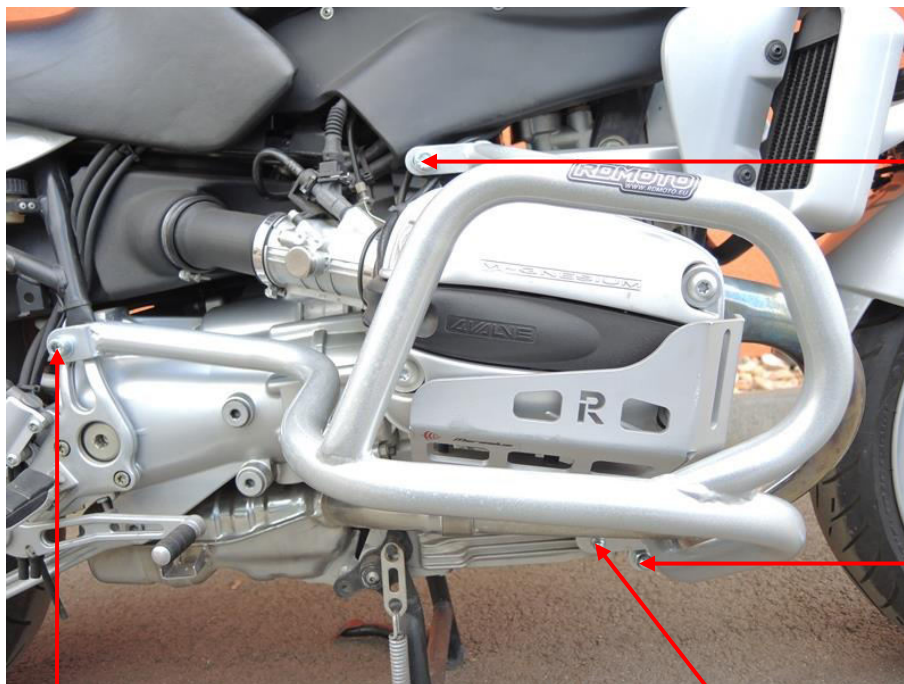

Replace the original bolt with bolt M10x100(ID. 6.) onto which you fit dural. roller DV1223(ID.2), between the thread and frame.


Rod 10x230x30x30 + DV1255 Washer M10 + hat type nut

Bolt M10x60 (ID.9) + Washer flat M10 (ID.5.), put dural. roller between crash frame and motorcycle frame (ID.11)

Nut M8 (self-locking) + Washer M8 (flat) +lean the silentblock against engine block

Left side:

Replace the original bolt with bolt M10x100 (ID.6.) onto which you fit dural. roller DV1223(pozn.2) between crash and motorcycle frame.

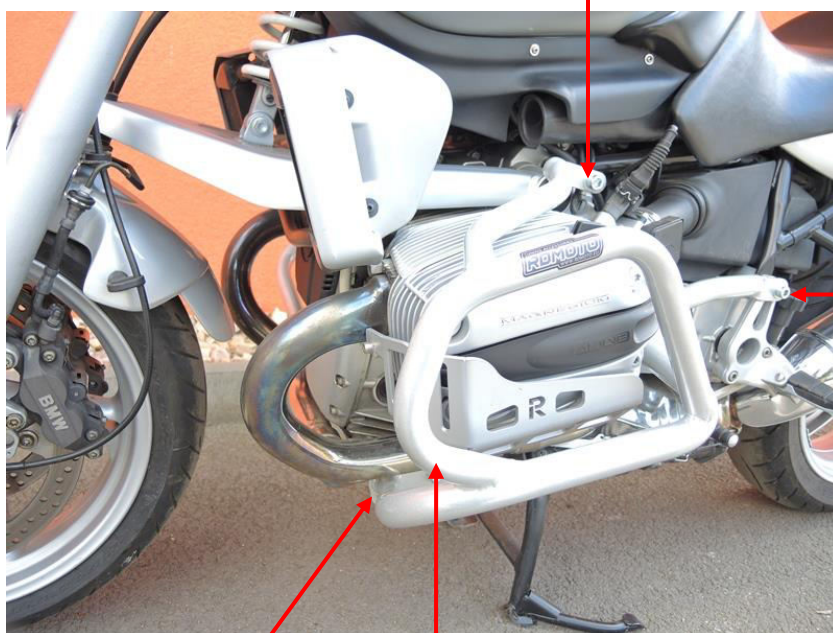

Bolt
M10x50mm +
Dural. roller
(length 15mm)
+ Washer M10
(flat)

Dural. roller
DV1256(pozn.12.) + Washer
M10 + Hat type nut M10

Hat type nut M8 +
Washer M8 (flat) +
silentblock