

CF80

Triumph Tiger 800 XCX '16-


RIGHT SIDE KIT

ID	Description	Cat.no	Pcs
1	Bolt M10x70x1,25	898	1
2	Alu. cylinder 25mm	DV88	1
3	Bolt M8x30	834	1
4	Plastic cap M10	X4	1
5	Washer M10	804	1


LEFT SIDE KIT

ID	Description	Cat.no.	Pcs
1	Bolt M10x70x1,25	898	1
2	Bolt M10x90x1,25	890	1
3	Alu. cylinder 36mm	1239	1
4	Alu. cylinder 35mm	1240	1
5	Washer M10	804	2
6	Plastic cap M10	X4	2


**Fit crash frames according to the pictures below.
We recommend to use safety glue on all threads.**

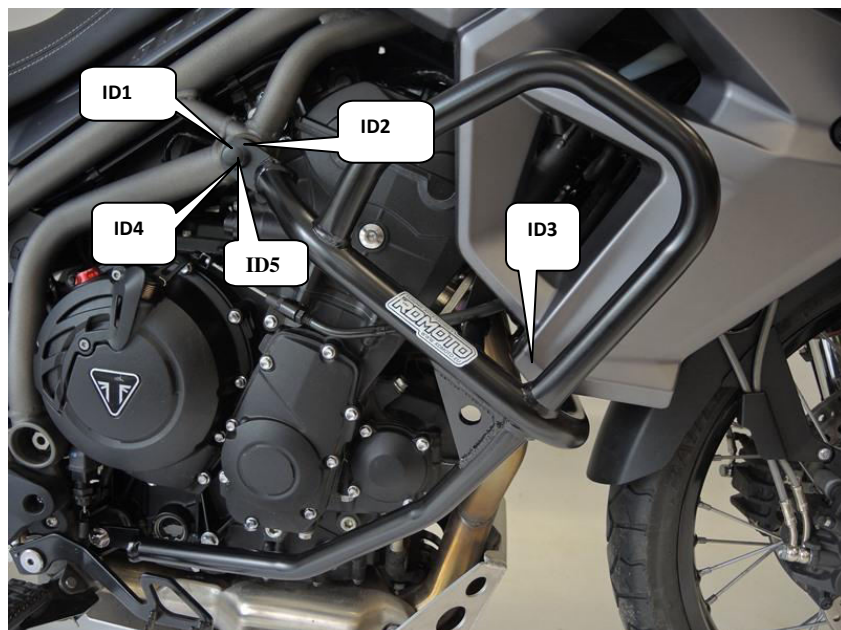

Dismantle fairing of the motorcycle. Unbolt bolt M10 and bolt after hand brake. Fit crash frames according to the picture. Fit lower part of the frame using original bolt.

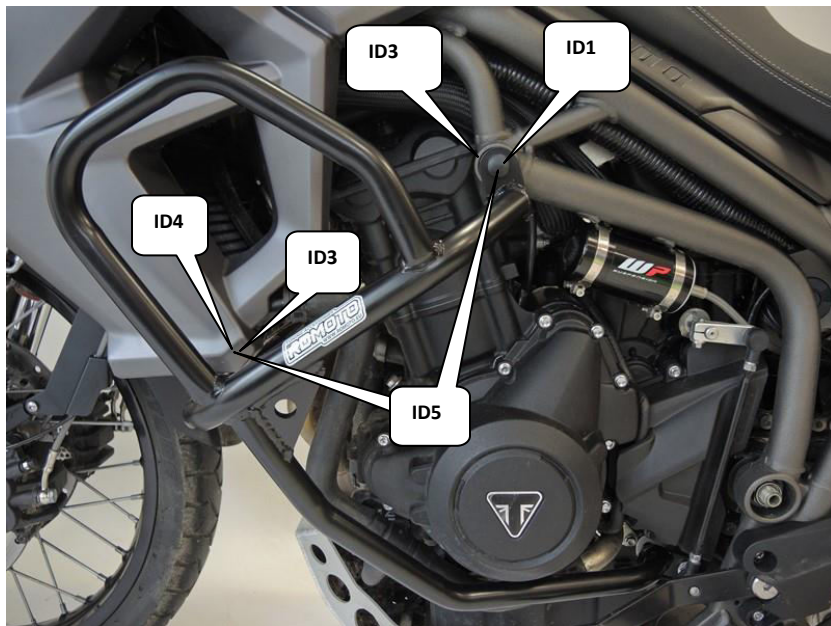

Dismantle fairing on of the motorcycle. Unbolt original bolt M10. Fit crash frames according to the picture. Use original nut for fitting lower part of the crash frame.

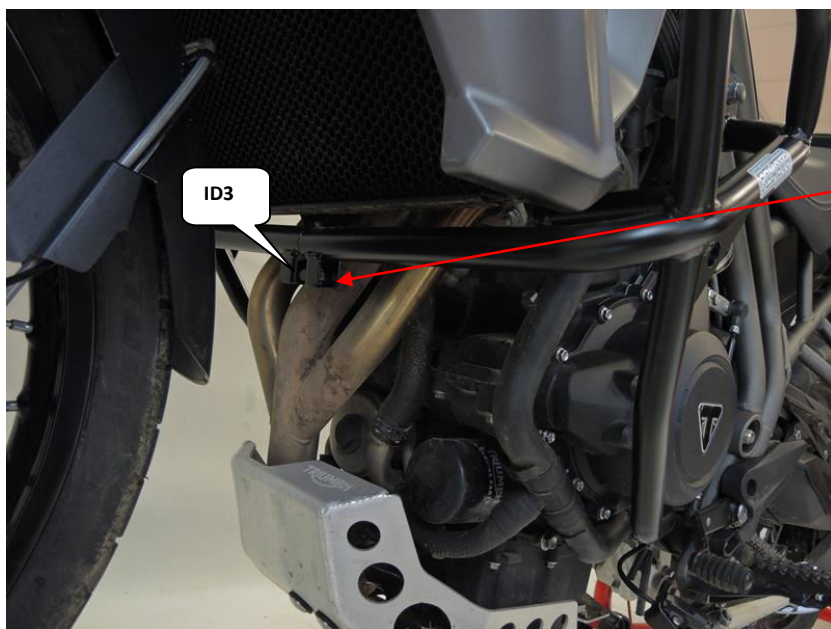

Fit frames together using bolt M8 (ID3 – Right side kit). Place cover on bots. Put fairing back on both sides.

