



RDMOTO CZECH REPUBLIC
info@rdmoto.eu
www.rdmoto.eu

CF167

Aprilia Tuareg 660

Kit for left side


ID	Description	Cat.No.	Pc
1	Crash frame - left	CF167-L	1
2	Protector	PVPKN-0/16	1
3	Al insert to the protector	X131	1
4	Dural.roller l=38,5mm	1402	1
5	Bolt M10x130mm	883	1
6	Dural.roller l=18,5mm	1403	1

Kit for right side


ID	Description	Cat.No.	Pc
1	Crash frame – right	CF167-P	1
2	Protector	PVPKN-0/16	1
3	Al insert to the protector	X131	1
4	Dural.roller l=38,5mm	1402	1
5	Bolt M10x130mm	883	1
6	Dural.roller l=20mm	1292	1
7	Bolt M10x60mm	850	1
8	Washer M10	804	1

We recommend using medium strength thread glue during assembly.

Right side :

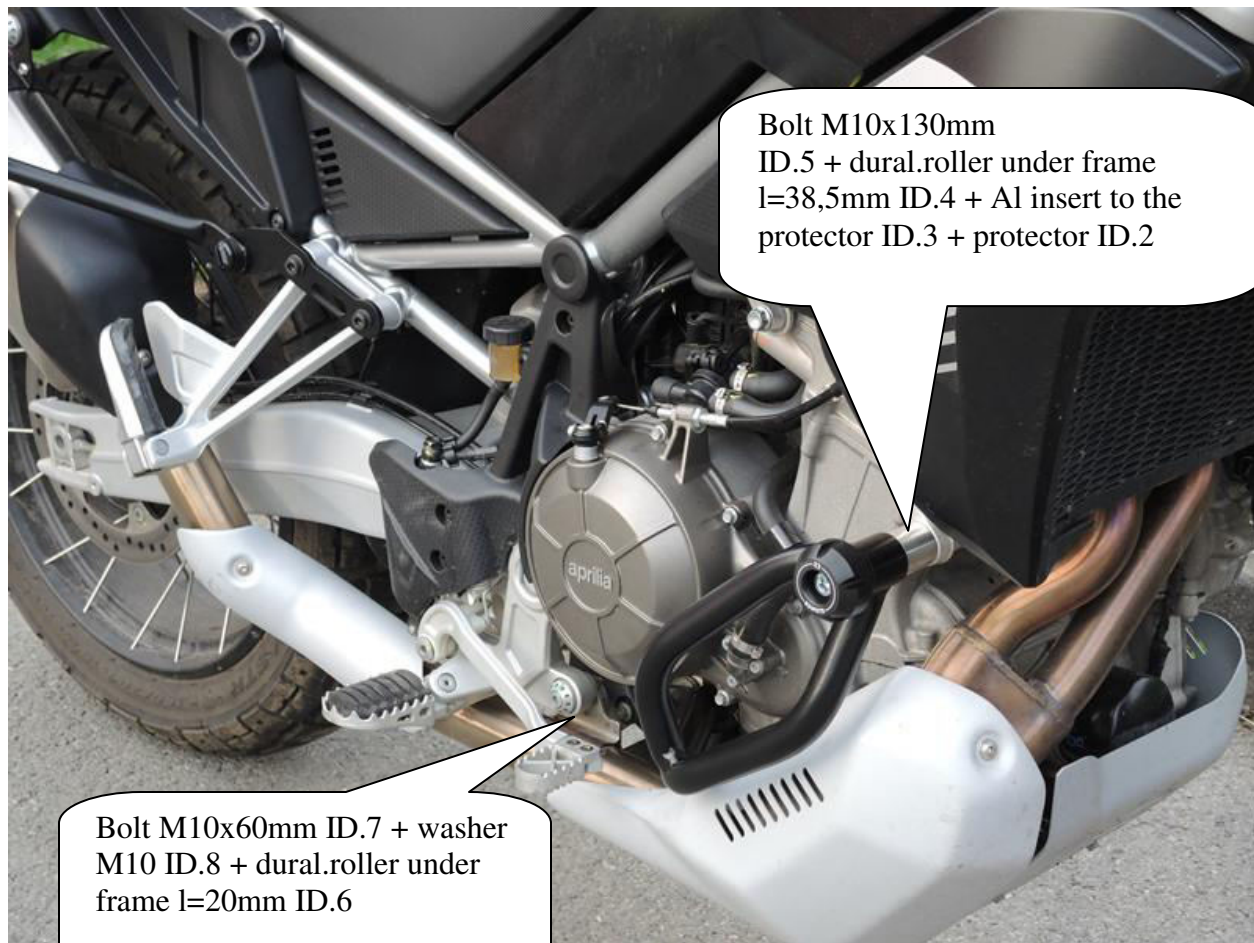

Left side :

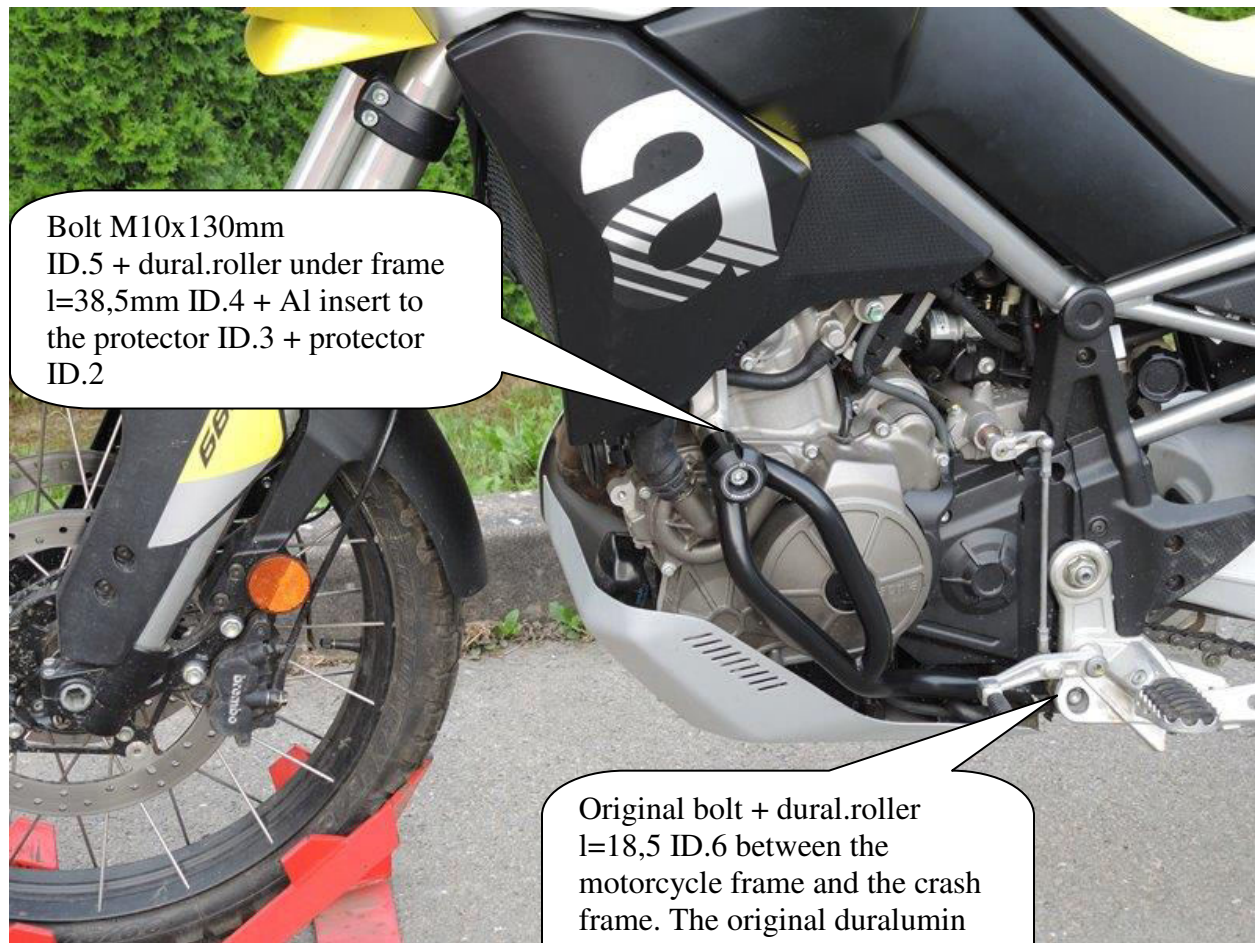

Bolt M10x130mm
ID.5 + dural.roller under frame
l=38,5mm ID.4 + Al insert to
the protector ID.3 + protector
ID.2

Original bolt + dural.roller
l=18,5 ID.6 between the
motorcycle frame and the crash
frame. The original duralumin
roller is removed and replaced
with ours.