

CF81

KTM 1290 Super Duke/GT 2015-

LEFT SIDE KIT

ID	Description	Cat.no.	Pcs
1	Crash frame	CF81	1
2	Bolt M10x70	851	1
3	Bolt M10x30	888	1
4	Bolt M8x20	824	2
5	Washer M10	804	2
6	Washer M8	802	2
7	Cylinder 17mm	1233	1
8	Adapter SLD	X92	1
9	Bolt M6x35	989	2
10	Washer M6	1023	2
11	Rod 330mm	X90	1
12	SLDM		1
13	Dural. cylinder 7mm	405	1

RIGHT SIDE KIT

ID	Description	Cat.No.	Pcs
1	Crash frame	CF81	1
2	Bolt M10x70	851	1
3	Bolt M8x45	964	1
4	Bolt M8x20	824	4
5	Washer M10	804	1
6	Washer M8	802	4
7	Cylinder 26mm	1234	1
8	Adapter SLD	X92	1
9	Bolt M6x35	989	2
10	Washer M6	1023	2
11	Rod	X89	1
12	SLDM		1
13	Dural. cylinder 7mm	405	1
	Dural. cylinder 25mm	1245	1

LEFT SIDE INSTRUCTIONS



- 1) Fit slider ID12, adapter ID8 using bolts ID9 and washers ID10 on the frame.
- 2) Unbolt original bolts from the left side of motorcycle.
- 3) Fit crash frame using bolt ID2 and washer ID5 (into the thread of original bolt) (between ID frame and drop frame, insert ID.13). Fit rear part of frame using rod ID11 with cylinder ID7 and bolt ID4 with washer ID6.
- 4) Fit crash frame using bolts ID4 and ID3 washers ID6 and cylinder ID14.
- 5) Use bolt ID4 for tightening rod ID11.

RIGHT SIDE INSTRUCTIONS

- 1) Fit slider ID12, adapter ID8 using bolts ID9 and washers ID10 on the frame.
- 2) Unbolt original bolts from the right side of motorcycle.
- 3) Fit crash frame using bolt ID2 and washer ID5 (into the thread of original bolt) (between ID frame and drop frame, insert ID.13).
- 4) Place cylinder ID7 on the end of rod ID11.
- 5) Fit rear part using bolt ID4 and washer ID6.
- 6) Use bolt ID4 for tightening rod ID11.
- 7) Fit front part of frame using bolt ID3.

We recommend to use safety glue on all threads (medium strong).

RIGHT SIDE

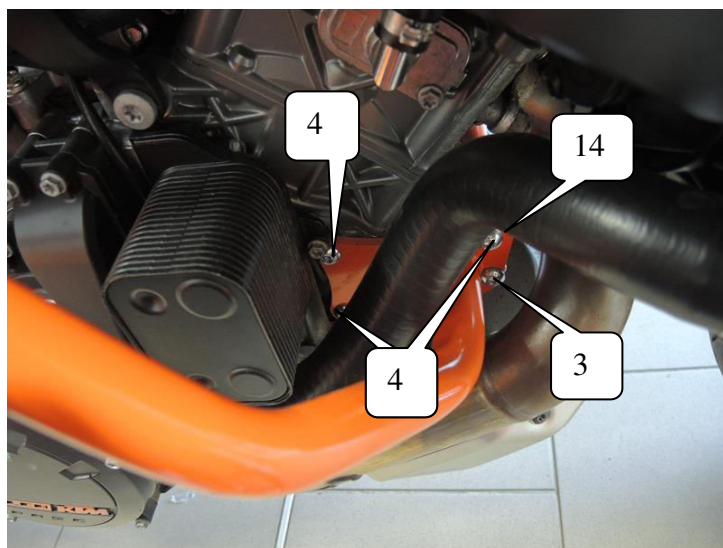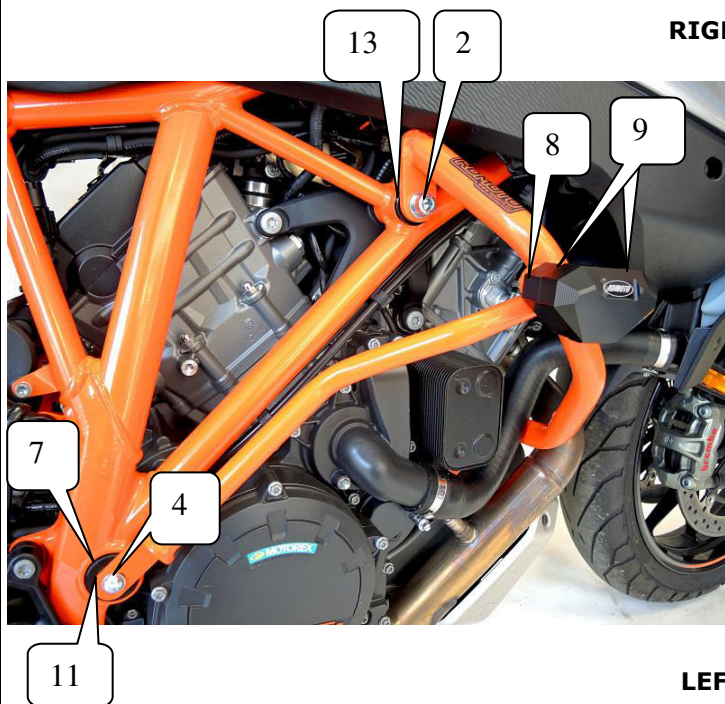

LEFT SIDE

