



CF19

Honda X11 2000-

Kit for the left side

No.	Description	Cat.no.	Pcs
1	Crash bars		1
2	Bolt M10x85x1,25	934	1
3	Dural.cylinder d=20mm	435	1
4	Plastic plug into the tube 22mm	X32	1
5	Bolt M8x16mm	829	1
6	Pad M8 - spring	800	1
7	Steel nut M12	X12	1
8	Plastic plug into the tube 25mm	X19	1
9	Advertising sticker RDmoto		1
10	Steel bar 12(1,25)x395x30x30		1
11	Connecting bar d=302mm	X33	1

Kit for the right side


No.	Description	Cat.no.	Pcs
1	Crash bars		1
2	Bolt M10x85x1,25	934	1
3	Dural.cylinder d=20mm	435	1
4	Plastic plug into the tube 22mm	X32	1
5	Bolt M8x16mm	829	1
6	Pad M8 - spring	800	1
7	Steel nut M12	X12	1
8	Plastic plug into the tube 25mm	X19	1
9	Advertising sticker RDmoto		1

Installation:

Make the installation according to the instruction on the below attached photos. The installation of the left and right side is the same.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

The right side:

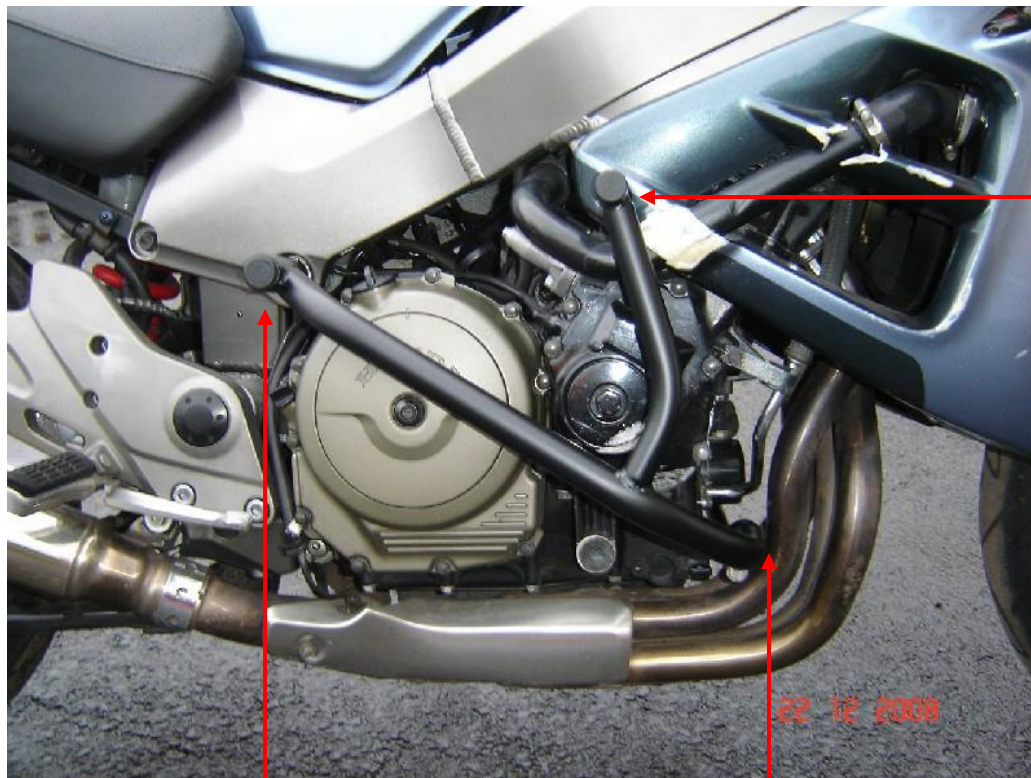


Insert
dural.cylinder
between the
fairing and frame
,use bolt M10x85
+ plastic plug
into the tube
22mm

steel bar d= 395mm +
steel nut M12 + plastic
plug into the tube 25mm

connecting bar + bolt
M8x16mm + pad M8
(spring)

The left side:

Insert dural.cylinder between the
fairing and frame ,use bolt M10x85
+ plastic plug into the tube 22mm

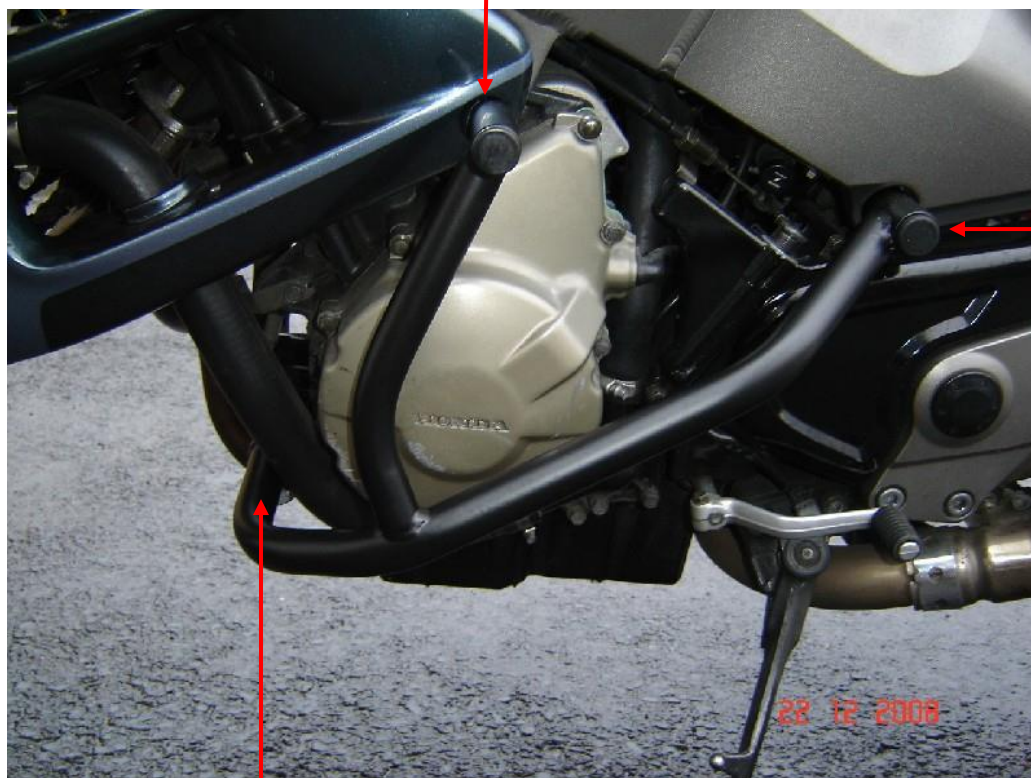

steel bar
d=335mm +
steel nut M12 +
plastic plug into
the tube 25mm

connecting bar + bolt
M8x16mm + pad M8
(spring)