

CF08

BMW R1150GS / Adventure

Kit for the left side

No.	Description	Cat.no.	Pcs
1	Crash bar		1
2	Steel strut between bars	X22	1
3	Silenblok	X21	1
4	Nut M8 – safety	809	1
5	Pad M8 – plane	802	1
6	Bolt M8x25mm	831	1
7	Pad M8-spring	800	1
8	Bolt M10x100mm	885	1
9	Pad M10-spring	801	2
10	Dural. cylinder d=55mm	439	1
11	Screw M10x70mm	851	1
12	Dural.cylinder 15mm	1170	1
13	Advertising sticker RDmoto		1

Kit for the right side

No.	Description	Cat.no.	Pcs
1	Crash bar		1
2	Silenblok	X21	1
3	Nut M8 – safety	809	1
4	Pad M8 – plane	802	1
5	Bolt M8x25mm	831	1
6	Pad M8-spring	800	1
7	Bolt M10x100mm	885	1
8	Pad M10-spring	801	2
9	Dural. cylinder d=55mm	439	1
10	Screw M10x70mm	851	1
11	Dural. cylinder 15mm	1170	1
12	Advertising sticker RDmoto		1

Installation:


Make the installation of the crash bar according to the instruction on the below attached photos.

The installation of the crash bar for the left and right side is the same.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

The right side:

bolt M10x100mm +
duralumin cylinder 55mm
+ pad M10 (spring)

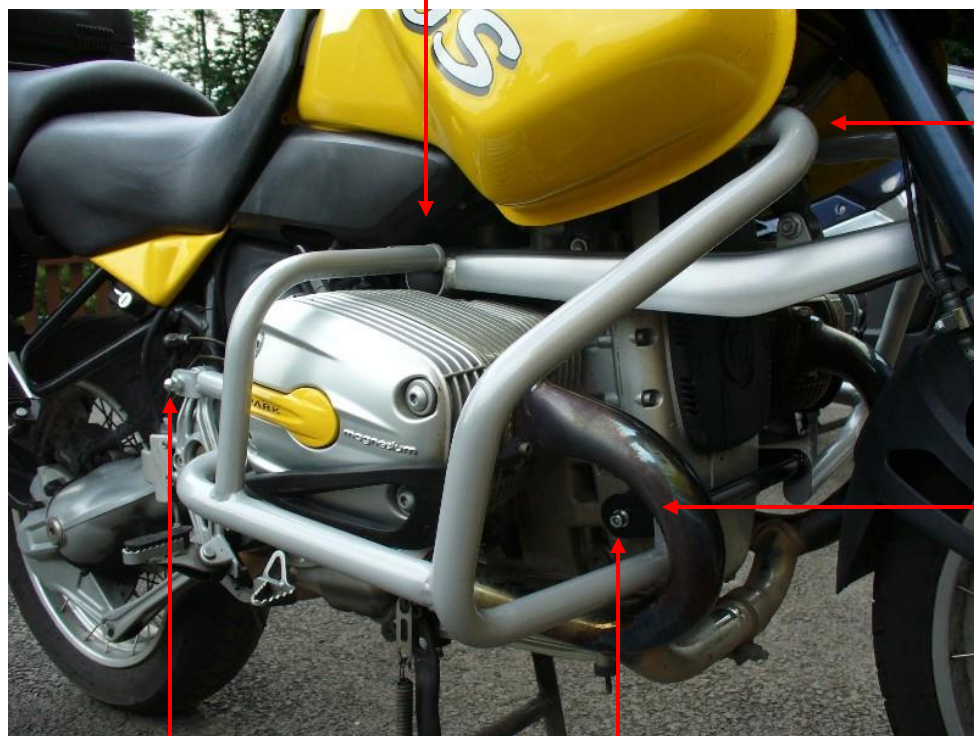

original bolt

bolt
M8x25mm
+ pad M8
(spring)

Screw M10x70mm, dural.
cylinder l=15mm and spring
washer

nut M8 (safety) + pad
M8 (plane) + silenblock

The left side:

