

CF166-PH01

Honda CB750 Hornet

Kit for left side			
ID	Description	Cat.No.	Pcs
1	Protector	PVPKN-0/16	1
2	Dural. insert to the protector	X131	1
3	Bolt M10x35mm	847	1
4	Bolt M10x70x1,25mm	922	2
5	Washer M10	804	3
6	Nut M12 – insurance	811	1
7	Washer M12	803	2
8	Nut M10 – insurance	810	1
9	Nut M12	1073	1
10	Dural.roller l=23mm	1413	1
11	Rod l=200mm	10x200x30x30	1
12	Threaded rod l=315mm	12x315xZT	1
13	Sticker RDMoto		1

Kit for right side			
ID	Description	Cat.No.	Pcs
1	Protector	PVPKN-0/16	1
2	Dural. insert to the protector	X131	1
3	Bolt M10x35mm	847	1
4	Bolt M10x70x1,25mm	922	2
5	Washer M10	804	3
6	Nut M12 – insurance	811	1
7	Washer M12	803	2
8	Nut M10 – insurance	810	1
9	Nut M12	1073	1
10	Dural.roller l=75mm	1178	1
11	Sticker RDMoto		1

Note: We recommend using medium strenght thread glue for all bolts (blue color).


Lower mounting assembly :

Left side

Right side



Left side :

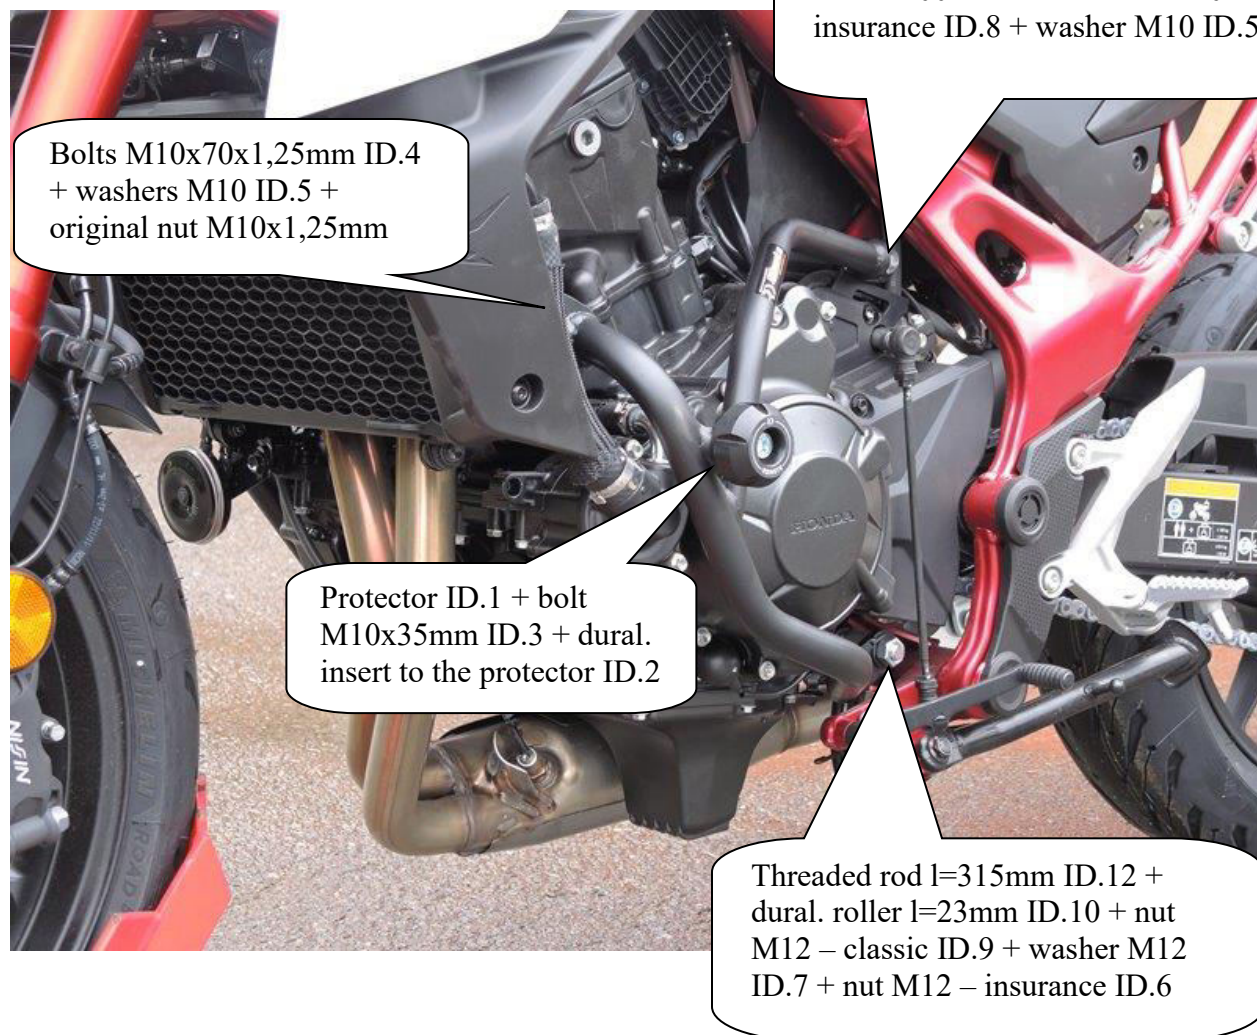

Right side :

Nut M10 – insurance ID.8 +
washer M10 ID.5

Bolts M10x70x1,25mm ID.4
+ washers M10 ID.5 +
original nuts M10x1,25mm

Protector ID.1 + bolt
M10x35mm ID.3 + dural.
insert to the protector ID.2

Dural.roller l=75mm ID.10 + nut
M12 – classic ID.9 + washer M12
ID.7 + nut M12 – insurance ID.6

