

SHAD

QUADRO 3D 350 '12 KIT TOP Q03D32ST




1 261844 x1



2 303017 x2
Ø6



3 304052 x2
M6 x 20 Din 7380

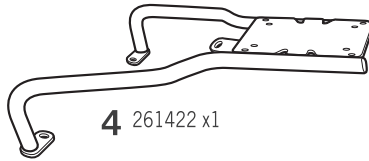

4 261422 x1



5 303020 x3
Ø8



6 304053 x3
M8 x 30 Din 7380

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

