


SHAD

HONDA CTX 700 '14

HOCT74IF

3P
SYSTEM

DESIGNED IN
BARCELONA




1 261678 x1 →
261679 x1 ←



2 304028 x4
M8 x 25 Din 7380



3 303020 x10
Ø8

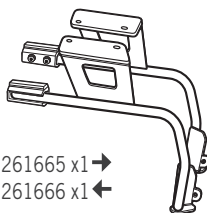

4 261665 x1 →
261666 x1 ←



5 261117 x4
Ø20 Ø11 x 16



6 304067 x4
M8 x 65 Din 912



7 302024 x4
M8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

