

CF160

Kawasaki Versys 650 2022-

Kit for left side:


ID	Description	Cat.No	Pcs
1	Crash frame	CF160-L	1
2	Bolt M6x50mm	867	1
3	Washer M6 – flat	987	1
4	Dural.roller l=12mm	120	1
5	Bolt M10x120mm	881	1
6	Washer M10	804	2
7	Nut M10	814	2
8	Stick 10x300x30x30mm		1
9	Dural.roller l=85mm	1377	1

Kit for right side:

ID	Description	Cat.No	Pcs
1	Crash frame	CF160-P	1
2	Bolt M6x50mm	867	1
3	Washer M6 – flat	987	1
4	Dural.roller l=12mm	120	1
5	Bolt M10x160mm	979	1
6	Washer M10	804	2
7	Nut M10	814	2

Mounting Instructions:

We recommend using medium strength thread glue during assembly.

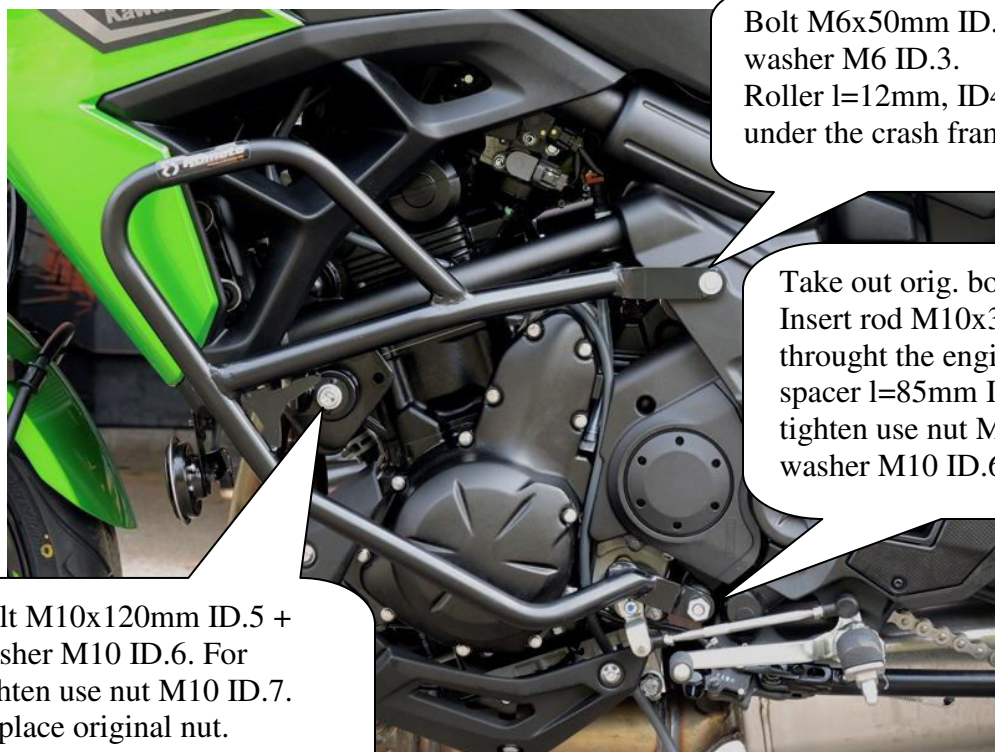

Bolt M6x50mm ID.2+ washer M6 ID.3.
Roller l=12mm, ID4 – under the crash frame.

Take out orig. bolt M10x200.
Insert rod M10x300 ID.8 through the engine. Insert spacer l=85mm ID.9. For tighten use nut M10 ID.7 + washer M10 ID.6.

Bolt M10x120mm ID.5 + washer M10 ID.6. For tighten use nut M10 ID.7. Replace original nut. Original silentblock leave on the frame.



Bolt M6x50mm ID.2+
washer M6 ID.3.
Roller l=12mm, ID4 –
under the crash frame.

Bolt M10x160mm ID.5 +
washer M10 ID.6. For
tighten use nut M10 ID.7.
Replace original nut.
Original silentblock leave on
the frame.

Remove the footrest cover and bracket. Place a
crash frame under the footrest holder, use the
original screw for mounting. Refit the footrest
and cover on the motorcycle.